

Form 20818
(1255)
Printed in U. S. A.

LIST
OF
PARTS
FOR FAMILY SHOPS



SINGER**

MACHINE No. 319w2

THE SINGER MANUFACTURING COMPANY

INDEX

	Page
Accessory.....	15
Attachment Set.....	15
Bobbin Winder.....	16
FASHION** Discs.....	16
Foot Controller (Bakelite).....	17
Machine No. 319w2.....	5
Motor (BA3-8).....	18
Motor Parts.....	19
Numerical List of Parts.....	21
SINGER** Light.....	19

PROPERTY OF THE SINGER MANUFACTURING COMPANY

This is a private and confidential communication to and for the use of only the employees of The Singer Manufacturing Company and its affiliated companies. Reproduction, sale, distribution, or publication thereof to the public is forbidden.

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case) must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed.
- AL-Heat Treated for Toughness.
- ALX-Heat Treated for Toughness and Black Oxide.
- B-Polished, Nickel Plated and Buffed.
- C-Hardened only.
- D-Polished only.
- E-Soft, Not polished.
- F-Hardened and Polished.
- J-Nickel Plated only.
- R-Merlized.
- X-Black Oxide, for Iron and Steel
- Z-Chromium Plated.
- ZA- Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.
- ZB-Polished, Nickel Plated, Buffed and Chromium Plated.
- ZJ-Nickel and Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series

- 1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
- 1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
- 1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
- 2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

SPECIAL NOTICE


When ordering the following enumerated parts, the style of finish required, whether "Black", "Beige" or "Green", must be stated on order.

No.	Name
66670	Bobbin Winder Frame
105072	Hand Wheel
105109	Needle Vibrator Indicator Ring
105116	Needle Vibrator Zero Position Control Bearing Sleeve
105119	Needle Vibrator Zero Position Control Lever
105150	Needle Vibrator Amplitude Regulating Lever
105159	Face Plate
105194	Bobbin Winder Bracket (Belt Cover)
105214	Needle Bar Frame Pitman
105215	Needle Bar Frame Pitman Crank
105220	Needle Vibrator Zero Position Tenon Plate
105260	Machine Handle
173009	Arm Side Cover (back)
173012	Arm Top Cover
173015	Disc Follower Frame
173016	Disc Selector (No Marking, for interchangeable disc)
173017	Disc Selector (A-Zig-Zag Stitch)
173018	Disc Selector (B-Multiple Zig-Zag Stitch)
173019	Disc Selector (C-Scalloped Stitch)
173020	Disc Selector (D-Zig-Zag Point Stitch)
173021	Disc Selector (E-Ball Stitch)
188417	Needle Vibrator Rock Shaft Lever
194584	Foot Controller
196619	SINGER Light and Bracket
BA3-8	Motor, Bracket, 3 Pin Terminal and all Leads

LIST OF PARTS COMPLETE

5

FOR

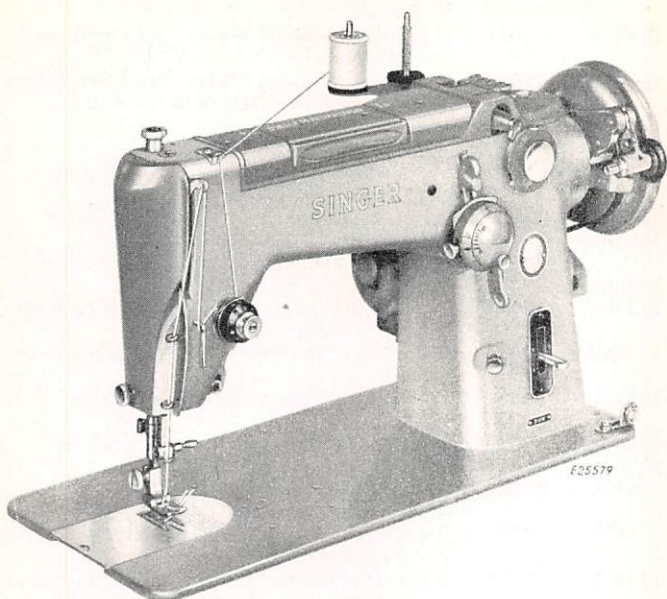

MACHINE No. 319w2

FAMILY MACHINE

SINGLE NEEDLE. LOCK STITCH.

TRANSVERSE HOOK. DROP FEED.

Fitted with Five Internal Discs and One External, Interchangeable Disc, That Produce Zigzag or Ornamental Stitch Patterns Automatically. Adjustable Reverse Feed.

MOTOR DRIVEN.

No.	Plate	Name
*173001	-----	Arm
Note: Due to the accuracy required in setting Arm to Bed, these Parts cannot be supplied except when repairs are made at factory.		
670E	19029	Arm Binding Screw (3)
105080	19029	Arm Binding Screw Washer (3)
173002	19031	Arm Cross Shaft
173003	19031	Arm Cross Shaft Collar with two 460AL
460AL	19031	Arm Cross Shaft Collar Set Screw
105202	19023	Arm Cross Shaft Driving Worm with two 50395AL

No.	Plate	Name
50395AL	19023	Arm Cross Shaft Driving Worm Set Screw
105206	19031	Arm Cross Shaft Worm Gear with two 50395AL
50395AL	19031	Arm Cross Shaft Worm Gear Set Screw
4389	19029	Arm Dowel Pin (for repairs only)
173052	19023	Arm Shaft
173004	19023	Arm Shaft Bushing (back)
SS.664E	19023	Arm Shaft Bushing (back) Clamping Screw (3)
105083	19023	Arm Shaft Bushing (back) Pad (felt)
105183	19023	Arm Shaft Bushing (front)
443AL	19023	Arm Shaft Bushing (front) Set Screw
189542	19023	Arm Shaft Connection Belt
173008	19023	Arm Shaft Connection Belt Pulley with two 448AL
448AL	19023	Arm Shaft Connection Belt Pulley Set Screw
105233	19023	Arm Shaft Thrust Collar with two 50395AL
50395AL	19023	Arm Shaft Thrust Collar Set Screw
173009	19029	Arm Side Cover (back)
45826	19029	Arm Side Cover (back) Spool Pin Spring
8879	19029	Arm Side Cover (back) Spool Pin Washer (cloth)
173011	19029	Arm Side Cover (back) complete, Nos. 173009, two each 8879 and 45826
51224ZB	19029	Arm Side Cover Thumb Screw
173012	19023	Arm Top Cover with three 170168
170168	19023	Arm Top Cover Oil Metering Insert
173013	19023	Arm Top Cover with Machine Handle complete, Nos. 105260, 173012, two each 105261, 140740J and 170057
140760ZB	19023	Arm Top Cover Screw (3)
*105184	-----	Bed
Note:	Due to the accuracy required in setting Arm to Bed, these Parts cannot be supplied except when repairs are made at factory.	
256ZB	19023	Clamp Stop Motion Clamp Screw
248ZA	19023	Clamp Stop Motion Clamp Stop Screw
171502	19023	Clamp Stop Motion Clamp Washer
45312	19023	Clamp Stop Motion complete, Nos. 248ZA, 45313, 51320AL and 171502
45311	19023	Clamp Stop Motion Flanged Bushing
45313	19023	Clamp Stop Motion Flanged Bushing 45311 with 256ZB
51320AL	19023	Clamp Stop Motion Flanged Bushing Set Screw
276301	19031	Disc, No. 1, Zig-Zag Stitch (in Machine)
276302	19031	Disc, No. 2, Multiple Zig-Zag Stitch (in Machine)
276303	19031	Disc, No. 3, Blind Stitch (in Machine)
276304	19031	Disc, No. 4, Scallop Stitch (in Machine)
276314	19031	Disc, No. 14, Zig-Zag Point Stitch (in Machine)
276319	19031	Disc, No. 19, Ball Stitch (in Machine)
173014	19031	Disc Bushing
173015	19032	Disc Follower Frame

No.	Plate	Name
105209	19031	Disc Follower Frame Hinge Pin
449AL	19031	Disc Follower Frame Hinge Pin Set Screw
105210	19031	Disc Follower Frame Locating Collar with 200AL
200AL	19031	Disc Follower Frame Locating Collar Set Screw
173033	19032	Disc Follower Frame complete, Nos. 1735X, 50429AL, 173015 to 173021, 173024, 173025, 173028 to 173032, two 173027, four 173026, five 223J and six each 173022 and 173023
NN.122ZA	19031	Disc Retaining Nut with 105234
105234	19031	Disc Retaining Nut Friction Washer (rubber)
173016	19032	Disc Selector (No Marking, for inter- changeable disc)
173017	19032	Disc Selector (Marked Zig-Zag Stitch, for Disc No. 276301)
173018	19032	Disc Selector (Marked Multiple Zig- Zag Stitch, for Disc No. 276302)
173019	19032	Disc Selector (Marked Scalloped Stitch, for Disc No. 276304)
173020	19032	Disc Selector (Marked Zig-Zag Point Stitch, for Disc No. 276314)
173021	19032	Disc Selector (Marked Ball Stitch, for Disc No. 276319)
173022	19032	Disc Selector Locking Pin
173023	19032	Disc Selector Locking Pin Spring
173024	19032	Disc Selector Locking Pin Spring Re- tainer (back)
223J	19032	Disc Selector Locking Pin Spring Re- tainer (back) Screw
173025	19032	Disc Selector Locking Pin Spring Re- tainer (front)
223J	19032	Disc Selector Locking Pin Spring Re- tainer (front) Screw
173026	19032	Disc Selector Spacing Washer (inside 1/32 in.)
173027	19032	Disc Selector Spacing Washer (outside 1/64 in.)
173028	19032	Disc Selector (back) Stud
50429AL	19032	Disc Selector (back) Stud Set Screw
173029	19032	Disc Selector (back) Stud Spring
173030	19032	Disc Selector (front) Stud
173031	19032	Disc Selector (front) Stud Friction Washer
1735X	19032	Disc Selector (front) Stud Nut
173032	19032	Disc Selector (front) Stud Washer
173034	19031	Disc Washer (2)
105159	19029	Face Plate
105160	19029	Face Plate 105159 with two 189541
50222ZB	19029	Face Plate Screw
105004	19029	Face Plate Thread Guard
189541	19029	Face Plate Thread Guard 105004 with 125373
125373	19029	Face Plate Thread Guard Rivet
51224ZB	19029	Face Plate Thumb Screw
173035	19025	Feed Bar with two 889AL
173036	19025	Feed Bar Hinge Pin

No.	Plate	Name
173037	19025	Feed Bar Hinge Pin Retainer
889AL	19025	Feed Bar Hinge Pin Set Screw
173038	19025	Feed Bar Supporting Bracket with two 889AL
889AL	19025	Feed Bar Supporting Bracket Set Screw
173056	19025	Feed Bar complete, Nos. 105149, 173035 to 173038 and two 50117C
105149	19025	Feed Dog, for 105266
50117C	19025	Feed Dog Screw
188927	19024	Feed Eccentric with two 183026AL
183026AL	19024	Feed Eccentric Set Screw
189577	19025	Feed Forked Connection
189705	19025	Feed Forked Connection 189577 with 2049 and 189578
189706	19025	Feed Forked Connection complete, Nos. 1550ZJ, 1637J, 183016C, 183017C, 188925, 188926, 189572 and 189705
2049	19025	Feed Forked Connection Pin
189578	19025	Feed Forked Connection Shaft
173064	19025	Feed Forked Connection Shaft Adjusting Collar with two 465AL
465AL	19025	Feed Forked Connection Shaft Adjusting Collar Set Screw
105132	19024	Feed Lifting Eccentric with two 1120AL
105161	19024	Feed Lifting Eccentric Fork
1120AL	19024	Feed Lifting Eccentric Set Screw
105011	19024	Feed Lifting Rock Shaft
189579	19024	Feed Lifting Rock Shaft Adjusting Collar with two 465AL
465AL	19024	Feed Lifting Rock Shaft Adjusting Collar Set Screw
105255	19024	Feed Lifting Rock Shaft and Eccentric Fork complete, Nos. 157AL, SS. 694J, 105011, 105132, 105161, 105166 to 105168 and 189579
188952	19024	Feed Lifting Rock Shaft Crank with 158E and 125330
158E	19024	Feed Lifting Rock Shaft Crank Clamp- ing Screw
15170	19024	Feed Lifting Rock Shaft Crank Slide Block
125330	19024	Feed Lifting Rock Shaft Crank Slide Block 15170 with 125060
125060	19024	Feed Lifting Rock Shaft Crank Slide Block Stud
189588	19031	Feed Regulator Connecting Rod
86C	19031	Feed Regulator Connecting Rod Screw
189589C	19031	Feed Regulator Connecting Rod Stud
808AL	19025	Feed Regulator Connecting Rod Stud Set Screw
105162	19031	Feed Regulator Indicator Plate
335X	19031	Feed Regulator Indicator Plate Screw (2)
105163	19031	Feed Regulator Lever
105235	19031	Feed Regulator Lever Friction Fork
183018C	19031	Feed Regulator Lever Hinge Screw
105130	19031	Feed Regulator Stop Block
105093	19031	Feed Regulator Stop Block 105130 with 447AL and SS. 667AL
447AL	19031	Feed Regulator Stop Block Set Screw
SS. 698ZA	19031	Feed Regulator Stop Screw

No.	Plate	Name
105165	19031	Feed Reversing Handle
SS. 667AL	19031	Feed Reversing Handle Binding Screw
105012	19025	Feed Rock Shaft
105013	19025	Feed Rock Shaft Adjusting Collar with two 183026AL
183026AL	19025	Feed Rock Shaft Adjusting Collar Set Screw
105014	19025	Feed Rock Shaft Bushing (front)
448AL	19025	Feed Rock Shaft Bushing (front) Set Screw
188925	19025	Feed Rock Shaft Connecting Link with 808AL
188926	19025	Feed Rock Shaft Connecting Link Slide Block
183017C	19025	Feed Rock Shaft Connecting Link Slide Block Slide Bar
1550ZJ	19025	Feed Rock Shaft Connecting Link Slide Block Slide Bar Nut
189572	19025	Feed Rock Shaft Crank with 158E
158E	19025	Feed Rock Shaft Crank Clamping Screw
183016C	19025	Feed Rock Shaft Crank Hinge Screw
1637J	19025	Feed Rock Shaft Crank Hinge Screw Nut
105166	19024	Feed Throw-out Crank
157AL	19024	Feed Throw-out Crank Set Screw
SS. 694J	19024	Feed Throw-out Eccentric Fork Thumb Screw
105167	19024	Feed Throw-out Eccentric Fork Thumb Screw Clip
105168	19024	Feed Throw-out Spring
SS. 666AL	19024	Feed Throw-out Stop Screw
1637X	19024	Feed Throw-out Stop Screw Nut
105072	19023	Hand Wheel, 1/4 in. "V" belt (outside diam. of belt groove 3-1/2 in.)
105260	19023	Machine Handle
170057	19023	Machine Handle Hinge Pin
105261	19023	Machine Handle Spring
140740J	19023	Machine Handle Spring Screw
51045AL	19029	Machine Hinge Set Screw (2)
105186	19027	Needle Bar (hollow) with 32519
105015	19027	Needle Bar Connecting Link with 1161AL
189518	19027	Needle Bar Connecting Link Hinge Block (lower)
189515	19027	Needle Bar Connecting Link Hinge Block (upper)
1130E	19027	Needle Bar Connecting Link Hinge Block (upper) Cap Screw
105017	19027	Needle Bar Connecting Link Hinge Pin
105016	19027	Needle Bar Connecting Link Hinge Pin Retainer
1161AL	19027	Needle Bar Connecting Link Hinge Pin Retainer Screw
189520	19027	Needle Bar Connecting Link Stud with 400C and 465AL
400C	19027	Needle Bar Connecting Link Stud Adjusting Screw
183012C	19027	Needle Bar Connecting Link Stud Cap Screw
465AL	19027	Needle Bar Connecting Link Stud Set Screw

No.	Plate	Name
105018	19027	Needle Bar Connection, Nos. 105015, 105016, 189515, 189518 and two 105017
105019	19027	Needle Bar Connection complete, Nos. 1130E, 105018, 183012C, 189514 and 189520
188949	19023	Needle Bar Crank with 1036C and 1065AL
1065AL	19023	Needle Bar Crank Position Screw
105169	19027	Needle Bar Frame
173039	19027	Needle Bar Frame 105169 with 665ZB and 173043
173042	19027	Needle Bar Frame 173039 with 105186
105214	19031	Needle Bar Frame Pitman
105215	19031	Needle Bar Frame Pitman Crank with 180C
180C	19031	Needle Bar Frame Pitman Crank Pinch Screw
105216	19031	Needle Bar Frame Pitman Driving Link
173040	19031	Needle Bar Frame Pitman Driving Link Hinge Stud
173041	19031	Needle Bar Frame Pitman Driving Link Hinge Stud 173040 with 1423C and 51773X
51773X	19031	Needle Bar Frame Pitman Driving Link Hinge Stud Nut
1423C	19031	Needle Bar Frame Pitman Driving Link Retaining Screw
SS. 695AL	19031	Needle Bar Frame Pitman Fulcrum Pin (eccentric)
1521X	19031	Needle Bar Frame Pitman Fulcrum Pin Nut
183020C	19031	Needle Bar Frame Pitman Hinge Screw
105242	19031	Needle Bar Frame Pitman Retaining Collar with 904AL
904AL	19031	Needle Bar Frame Pitman Retaining Collar Set Screw
105244	19027	Needle Bar Frame Return Spring
105243	19027	Needle Bar Frame Return Spring Thimble
183038C	19027	Needle Bar Frame Supporting Bracket
183015C	19027	Needle Bar Frame Supporting Bracket Hinge Screw
624AL	19027	Needle Bar Frame Supporting Bracket Set Screw
27795	19027	Needle Bar Frame Supporting Bracket Set Screw Washer
173057	19027	Needle Bar Frame complete, Nos. 105190, 105264 and 173042
173043	19027	Needle Bar Height Indicator
665ZB	19027	Needle Bar Height Indicator Screw
32519	19027	Needle Bar Pin
105263	19027	Needle Clamp
105264	19027	Needle Clamp 105263 with SS. 675AL and 140545ZJ
105190	19027	Needle Clamp Gib
SS. 675AL	19027	Needle Clamp Gib Position Screw
140545ZJ	19027	Needle Clamp Thumb Screw
105150	19030	Needle Vibrator Amplitude Regulating Lever

No.	Plate	Name
105104	19030	Needle Vibrator Amplitude Regulating Lever Indent Clamping Pad
SS. 669ZA	19030	Needle Vibrator Amplitude Regulating Lever Indent Clamping Screw
105103	19030	Needle Vibrator Amplitude Regulating Lever Indent Plate
105105	19030	Needle Vibrator Amplitude Regulating Lever Indent Retaining Plate with 105129
50362E	19030	Needle Vibrator Amplitude Regulating Lever Indent Retaining Plate Screw
105101	19030	Needle Vibrator Amplitude Regulating Lever Plunger
105102	19030	Needle Vibrator Amplitude Regulating Lever Plunger Spring
105108	19030	Needle Vibrator Amplitude Regulating Shaft with 1423E
105172	19030	Needle Vibrator Amplitude Regulating Lever complete, Nos. 105101, 105102, 105106 to 105108, 105150 and three 934E
934E	19030	Needle Vibrator Amplitude Regulating Shaft Flange Fixing Screw
105129	19030	Needle Vibrator Amplitude Regulating Shaft Friction Spring
1423E	19030	Needle Vibrator Amplitude Regulating Shaft Screw
105106	19030	Needle Vibrator Amplitude Regulating Shaft Stop Shoe
105107	19030	Needle Vibrator Amplitude Regulating Shaft Stop Shoe Spring
105109	19030	Needle Vibrator Indicator Ring
173044	19030	Needle Vibrator Regulating Slide with two 50311AL
173045	19030	Needle Vibrator Regulating Slide 173044 with 173049 and two 229E
50311AL	19030	Needle Vibrator Regulating Slide Set Screw
173046	19030	Needle Vibrator Regulating Device complete, Nos. SS. 669ZA, 105103 to 105105, 105109, 105116, 105117, 105119, 105120, 105172, 105179, 105220, 173045, two 50156X and three 50362E
188417	19031	Needle Vibrator Rock Shaft Lever
105175	19027	Needle Vibrator Rock Shaft Lever Slide Bushing
1550X	19027	Needle Vibrator Rock Shaft Lever Slide Bushing Nut
SS. 696AL	19027	Needle Vibrator Rock Shaft Lever Slide Bushing Screw
173047	19031	Needle Vibrator Sliding Block
173048	19031	Needle Vibrator Sliding Block Spring
173049	19030	Needle Vibrator Sliding Block Spring Cap
229E	19030	Needle Vibrator Sliding Block Spring Cap Screw
105116	19030	Needle Vibrator Zero Position Control Bearing Sleeve

No.	Plate	Name
440AL	19030	Needle Vibrator Zero Position Control Bearing Sleeve Set Screw (back)
SS. 704AL	19030	Needle Vibrator Zero Position Control Bearing Sleeve Set Screw (front)
105117	19030	Needle Vibrator Zero Position Control Bearing Sleeve Thrust Washer
105120	19030	Needle Vibrator Zero Position Control Bushing with 140082E
140082E	19030	Needle Vibrator Zero Position Control Bushing Screw
105179	19030	Needle Vibrator Zero Position Control Eccentric with SS. 697X
SS. 697X	19030	Needle Vibrator Zero Position Control Eccentric Set Screw
105119	19030	Needle Vibrator Zero Position Control Lever
105220	19030	Needle Vibrator Zero Position Tenon Plate with two 175C
50156X	19030	Needle Vibrator Zero Position Tenon Plate Fixing Screw
175C	19030	Needle Vibrator Zero Position Tenon Plate Stop Screw
8366	19028	Presser Bar
45237	19028	Presser Bar Guide Bracket with 453AL
453AL	19028	Presser Bar Guide Bracket Set Screw
66564	19028	Presser Bar Lifter
85E	19028	Presser Bar Lifter Screw
105278	19028	Presser Bar Spring
2070	19028	Presser Bar Spring Washer
189645	19028	Presser Foot Hinge Pin
189644	19028	Presser Foot Shank
105249	19028	Presser Foot Sole
105250	19028	Presser Foot (hinged) complete, Nos. 105249, 189644 and 189645
183022ZB	19028	Presser Foot Thumb Screw
51228ZB	19028	Pressure Regulating Thumb Screw
66773	19028	Pressure Regulating Thumb Screw 51228ZB with 66752
66752	19028	Pressure Regulating Thumb Screw Plug (felt wick)
276251	19026	Rotating Hook with two 1253AL
276252	19026	Rotating Hook 276251 with 105042 and four 1053E
276253	19026	Rotating Hook 276252 with 105039 and three 1367D
173061	19026	Rotating Hook 276253 with 173059
173062	19026	Rotating Hook and Bobbin Case com- plete, Nos. 173058 and 173061
55623	19026	Rotating Hook Bobbin
173060	19026	Rotating Hook Bobbin Case
173063	19026	Rotating Hook Bobbin Case 173060 with 591F, 1380D and 105035
173058	19026	Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 173063
40393	19026	Rotating Hook Bobbin Case Hinge com- plete, Nos. 2974, 40392 and 125320
173059	19026	Rotating Hook Bobbin Case Holder
105034	19026	Rotating Hook Bobbin Case Holder Position Bracket

No.	Plate	Name
190ZB	19026	Rotating Hook Bobbin Case Holder Position Bracket Screw
40392	19026	Rotating Hook Bobbin Case Latch
125320	19026	Rotating Hook Bobbin Case Latch Lever
2974	19026	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin
2975	19026	Rotating Hook Bobbin Case Latch Spring
592E	19026	Rotating Hook Bobbin Case Latch Stop Screw
591F	19026	Rotating Hook Bobbin Case Tension Regulating Screw
105035	19026	Rotating Hook Bobbin Case Tension Spring
1380D	19026	Rotating Hook Bobbin Case Tension Spring Screw
105180	19024	Rotating Hook Driving Shaft
105049	19024	Rotating Hook Driving Shaft Bushing (back)
448AL	19024	Rotating Hook Driving Shaft Bushing (back) Set Screw
173050	19024	Rotating Hook Driving Shaft Connection Belt Pulley with two 448AL
448AL	19024	Rotating Hook Driving Shaft Connection Belt Pulley Set Screw
105134	19024	Rotating Hook Driving Shaft Spiral Gear with SS. 678AL and 183026AL
105136	19024	Rotating Hook Driving Shaft Spiral Gear Case with SS. 684AL
50234R	19024	Rotating Hook Driving Shaft Spiral Gear Case Cap Screw
50152ZJ	19024	Rotating Hook Driving Shaft Spiral Gear Case Clamping Screw
105038	19024	Rotating Hook Driving Shaft Spiral Gear Case Cover
223ZJ	19024	Rotating Hook Driving Shaft Spiral Gear Case Cover Screw (2)
448AL	19024	Rotating Hook Driving Shaft Spiral Gear Case Set Screw
183026AL	19024	Rotating Hook Driving Shaft Spiral Gear Set Screw
SS. 678AL	19024	Rotating Hook Driving Shaft Spiral Gear Timing Screw
1253AL	19026	Rotating Hook Screw
105039	19026	Rotating Hook Section
1367D	19026	Rotating Hook Section Screw
105040	19024	Rotating Hook Shaft
105135	19024	Rotating Hook Shaft Adjusting Collar with two SS. 677AL
SS. 677AL	19024	Rotating Hook Shaft Adjusting Collar Set Screw
105041	19024	Rotating Hook Shaft Bushing
SS. 684AL	19024	Rotating Hook Shaft Bushing Set Screw
105042	19026	Rotating Hook Thread Guard
1053E	19026	Rotating Hook Thread Guard Screw
189538	19009	Slack Thread Regulator
465AL	19009	Slack Thread Regulator Set Screw
2102	19009	Tension Disc
125421	19009	Tension Indicator
45864	19009	Tension Indicator Flange

No.	Plate	Name
45865	19009	Tension Indicator Flange Stop Washer
105185	19009	Tension Middle Disc
189537	19009	Tension Releasing Lever
97J	19009	Tension Releasing Lever Hinge Screw
12329	19009	Tension Releasing Lever Spring
45868	19009	Tension Releasing Pin
51681ZB	19009	Tension Regulating Thumb Nut with 45339
45339	19009	Tension Regulating Thumb Nut Engag- ing Pin
45869	19009	Tension Spring
140167ZJ	19009	Tension Stud
45870	19009	Tension Stud 140167ZJ with 51681ZB
105192	19009	Tension (graduated) complete, Nos. 32759, 45864, 45865, 45868 to 45870, 105185, 105193, 125421 and two 2102
26075	19028	Thread Cutter and Holder
105181	19009	Thread Guard (front of Arm)
330ZJ	19009	Thread Guard (front of Arm) Screw
189514	19027	Thread Take-up Crank
1036C	19023	Thread Take-up Crank Position Screw
*188901	-----	Thread Take-up Lever
188902	19027	Thread Take-up Lever 188901 with 32543 and 32544
*32544	-----	Thread Take-up Lever Link
1131C	19027	Thread Take-up Lever Link Hinge Screw
*32543	-----	Thread Take-up Lever Link Hinge Stud
105050	19027	Thread Take-up Lever complete, Nos. 1131C, 105109 and 188902
105193	19009	Thread Take-up Spring
32759	19009	Thread Take-up Spring Regulator with 50305C
50305C	19009	Thread Take-up Spring Regulator Screw
453AL	19009	Thread Take-up Spring Regulator Set Screw
105265	19028	Throat Plate (with oblong needle hole)
105266	19028	Throat Plate 105265 with 189625 and two 51282ZJ, for 105149
189625	19028	Throat Plate Spring
51282ZJ	19028	Throat Plate Spring Screw
	-----	Class Number Plate
228485	-----	Class Number Plate Drive Screw (2)

ACCESSORY

No.	Plate	Name
120861	19033	Oil Can, contents 3 fluid oz. (filled with household oil)

ATTACHMENT SET

160847	19012	Binder (multi-slotted)
189631	19033	Embroidery Plate only (less spring)
189632	19033	Embroidery Plate complete, Nos. 189625, 189631 and two 51282ZJ
189653	19012	Hemmer Foot, for Shell Seams
206x13	-----	Needles, three each, sizes 11 and 14
306x1-3	-----	Twin Needle (size 14)
189648	19012	Presser Foot, for Button Sewing
86616	19012	Presser Foot, for Buttonhole Work
105248	19012	Presser Foot (hinged) for Straight Stitching complete, Nos. 105245 to 105247
105251	19012	Satin Stitch Foot, for Applique, Wide Ornamental and Zig-Zag Seams
160845	19012	Presser Foot (left toe) for Edge Stitching and Zipper Work
160846	19012	Presser Foot (right toe) for Edge Stitching and Zipper Work
55623	19033	Rotating Hook Bobbin
120598	19033	Ruffler (1, 6 and 12 stitch)
25537	19033	Screw Driver (machine)
86613	19033	Screw Driver (Bobbin Case)
105267	19033	Throat Plate only (straight stitching)
189625	19033	Throat Plate Spring (for all plates)
51282ZJ	19033	Throat Plate Spring Screw (for all plates)
105268	19033	Throat Plate complete (for straight stitching) Nos. 105267, 189625 and two 51282ZJ
160977	-----	Attachment Set complete, Nos. 25537, 86613, 86616, 105248, 105251, 105268, 120598, 160845 to 160847, 189632, 189648, 189653, Twin Needle 306x1-3, four 55623 and six needles 206x13

BOBBIN WINDER

No.	Plate	Name
15072	19011	Bobbin Position Pin
105194	19011	Bracket (Belt Cover)
66670	19011	Frame
105046	19011	Frame 66670 with 15288ZB and 105047
51319ZB	19011	Frame Hinge Screw
66601	19011	Frame Spring
15287	19011	Friction Ring (rubber)
15288ZB	19011	Pulley
105047	19011	Spindle with 15072
45268	19011	Stop Latch
51303ZB	19011	Stop Latch Hinge Screw
125462	19011	Stop Latch Spring
125326	19011	Tripping Arm
190ZB	19011	Tripping Arm Screw
105195	19011	Bobbin Winder complete, Nos. 190ZB, 15287, 45268, 51303ZB, 51319ZB, 66601, 105046, 105194, 125326 and 125462
125395	19011	Tension Bracket
193ZB	19011	Tension Bracket Screw
7071Z	19011	Tension Bracket Screw Washer
45915	19011	Tension Disc
45847	19011	Tension Disc Spring
45916	19011	Tension Disc Spring Disc
140138B	19011	Tension Screw
125396	19011	Tension Bracket complete, Nos. 45847, 45915, 45916, 125395 and 140138B

FASHIONSM Discs

276301	19014	Disc, No. 1, Zig-Zag Stitch (in Machine)
276302	19014	Disc, No. 2, Multiple Zig-Zag Stitch (in Machine)
276303	19014	Disc, No. 3, Blind Stitch (in Machine)
276304	19014	Disc, No. 4, Scallop Stitch (in Machine)
276305	19014	Disc, No. 5, Arrowhead Stitch
276306	19014	Disc, No. 6, Domino Stitch
276307	19015	Disc, No. 7, Shell Edge Stitch
276308	19015	Disc, No. 8, Solid Scallop Stitch
276309	19015	Disc, No. 9, Icicle Stitch
276310	19015	Disc, No. 10, Banner Stitch
276311	19016	Disc, No. 11, Key Stitch
276312	19016	Disc, No. 12, Walls of Troy Solid Stitch
276313	19016	Disc, No. 13, Solid Diamond Stitch
276314	19016	Disc, No. 14, Zig-Zag Point Stitch (in Machine)
276315	19017	Disc, No. 15, Long Oblique Stitch
276316	19017	Disc, No. 16, Shingle Stitch

No.	Plate	Name
276317	19017	Disc, No. 17, Pennant Stitch
276318	19017	Disc, No. 18, Three-Step Stitch
276319	19017	Disc, No. 19, Ball Stitch (in Machine)
276320	19017	Disc, No. 20, Curved Mending Stitch
276321	19018	Disc, No. 21, Thunderbird Stitch
276322	19018	Disc, No. 22, Semaphore Stitch
276323	19018	Disc, No. 23, Solid Pyramid Stitch
276324	19018	Disc, No. 24, Open Pyramid Stitch
276325	19018	Disc, No. 25, Spiny Stitch
276326	19018	Disc, No. 26, Block Stitch
276327	19019	Disc, No. 27, Fagotting Stitch
276328	19019	Disc, No. 28, Comb Stitch
276329	19019	Disc, No. 29, Pavilion Stitch
276330	19019	Disc, No. 30, Platform Stitch
276400	-----	Set No. 8 of Discs complete, Nos. 276305 to 276313, 276315 to 276318 and 276320 to 276330

FOOT CONTROLLER (BAKELITE)

194572	21378	Controller Base
194570	-----	Controller Base 194572 with 192140, 194418, 194774, 194775, two each 23258, 140100X, 140103X, 194404, 194514 and 931090
194407	21378	Controller Base Cushion (rubber)
140099X	21378	Controller Base Screw
194573	21378	Controller Cover
194321	21378	Controller Foot Pedal
194574	21378	Controller Lead Cord, complete with Three-Pin Terminal (female half) from lamp socket to Three-Pin Terminal and Controller
192140	21378	Controller Resistance Unit, for 95 to 145 Volts
194774	21378	Controller Resistance Unit Adjusting Nut
194775	21378	Controller Resistance Unit Adjusting Nut Lock Spring
194416	21378	Controller Resistance Unit Bell Crank
51340C	21378	Controller Resistance Unit Bell Crank Hinge Screw
1607J	21378	Controller Resistance Unit Bell Crank Hinge Screw Nut
194404	21378	Controller Resistance Unit Bell Crank Spring
194402	21378	Controller Resistance Unit Bell Crank Spring Bracket
194418	-----	Controller Resistance Unit Bell Crank Spring Bracket 194402 with 194416, 194773, two each 1607J and 51340C
140100X	-----	Controller Resistance Unit Bell Crank Spring Bracket Screw

FOOT CONTROLLER (BAKELITE)

No.	Plate	Name
194514	-----	Controller Resistance Unit Bell Crank Spring Bracket Screw Insulating Disc
140103X	21378	Controller Resistance Unit Screw
931090	-----	Controller Resistance Unit Screw Washer (asbestos)
23258	21378	Controller Resistance Unit Screw Washer (steel)
193384	21378	Controller Resistance Unit Short Circuiting Contact (2)
51327J	21378	Controller Resistance Unit Short Circuiting Contact Screw (2)
194773	21378	Controller Resistance Unit Yoke
51340C	21378	Controller Resistance Unit Yoke Hinge Screw
1607J	21378	Controller Resistance Unit Yoke Hinge Screw Nut
*899815	-----	Name Plate
964317	-----	Name Plate Drive Screw
51093X	21378	Three-pin Terminal (female half) Housing Screw
1768X	21378	Three-pin Terminal (female half) Housing Screw Nut
192692	-----	Three-pin Terminal (female half) Insert Clamp
194521	21378	Three-pin Terminal (female half) com- plete, Nos. two each 1768X, 51093X and three 192692
194584	21378	Controller complete, for 95 to 145 volts, A. C. or D. C. Motor, Nos. 194321, 194570, 194573, 194574, 899815, two 964317, four each 140099X and 194407

BA3-8 MOTOR

195638	24623	Armature complete, for BA3-8 Motor
195540	24623	Armature Shaft Bearing (2)
195541	24623	Armature Shaft Bearing Retainer (2)
196862	24623	Brush (carbon) (2)
195543	24623	Brush Cover (2)
140433X	24623	Brush Cover Screw (2)
195547	24623	Brush Holder
195874	24623	Brush Lead Terminal (2)
196861	24623	Brush Spring (2)
195966	24623	End Cover (commutator end) for BA3-8 Motor with Name Plate
195546	24623	End Cover (commutator end) Washer (felt)
195926	24623	End Cover (pulley end) with Grease Tube
701792	24623	End Cover (pulley end) Washer (felt)
195545	24623	End Cover Insert (brass) (2)
140376X	24623	End Cover Screw (2)
195640	24623	Field Coil complete, for BA3-8 Motor

No.	Plate	Name
964514	24623	Field Coil Wedge (2)
195871	24623	Field Core complete
195544	24623	Field Core Wedge
194717	24623	Motor Lead Strain Relief
193231	24623	Pulley (moulded)
51207X	24623	Pulley Set Screw

MOTOR PARTS

198651	19021	Belt (moulded)
192851	19021	Lead Wire for Controller
190613	19021	Tube filled with Singer Motor Lubricant

SINGER Light

195281	19021	Body (lower half)
195280	19021	Body (upper half)
195958	19021	Body (upper half) 195280 with 195143, 196240 and 931728
195352	19021	Body Snap Ring (large)
195130	19021	Body Snap Ring (small)
196618	19021	Bracket
691X	19021	Bracket Screw (to fasten to Machine)
140512X	19021	Bracket Screw (to fasten to SINGER Light Body)
196621	19021	Lead with Terminal Clips and Spring Contacts complete, Nos. 195141 and 195351
195279	19021	Lens (Blue Glass)
195357	19021	Reflector
195282	19021	Shade
195358	19021	Shade Holder
195351	19021	Spring Contact and Holder
195141	19021	Spring Contact (lead end)
196240	19021	Switch Key
195143	-----	Switch Key Snap Ring
931728	-----	Switch Key Spring Washer
195137	-----	Switch Rotating Contact
195138	-----	Switch Rotating Contact Cam
195139	-----	Switch Rotating Contact Cam Insulator
195957	19021	Switch Rotating Contact 195137 with 195138 and 195139
196619	19021	SINGER Light (Blue Glass) complete (less lamp) Nos. 691X, 195130, 195279, 195281, 195282, 195357, 195957, 195958, 196618, 196621, two each 140512X, 195352 and 195358
194120	19021	SINGER Light Lamp (state voltage re- quired)

NUMERICAL LIST OF PARTS

No.	Plate	Name
	85E 19028	Presser Bar Lifter Screw
	86C 19031	Feed Regulator Connecting Rod Screw
	97J 19009	Tension Releasing Lever Hinge Screw
NN.	122ZA 19031	Disc Retaining Nut with 105234
	157AL 19024	Feed Throw-out Crank Set Screw, for 105255
	158E 19024	Feed Lifting Rock Shaft Crank Clamping Screw, for 188952
	158E 19025	Feed Rock Shaft Crank Clamping Screw, for 189572
	175C 19030	Needle Vibrator Zero Position Tenon Plate Stop Screw, for 105220
	180C 19031	Needle Bar Frame Pitman Crank Pinch Screw, for 105215
	190ZB 19011	Bobbin Winder Tripping Arm Screw, for 105195
	190ZB 19026	Rotating Hook Bobbin Case Holder Position Bracket Screw
	193ZB 19011	Bobbin Winder Tension Bracket Screw
	200AL 19031	Disc Follower Frame Locating Collar Set Screw, for 105210
	223J 19032	Disc Selector Locking Pin Spring Retainer (back) Screw, for 173033
	223J 19032	Disc Selector Locking Pin Spring Retainer (front) Screw, for 173033
	223ZJ 19024	Rotating Hook Driving Shaft Spiral Gear Case Cover Screw
	229E 19030	Needle Vibrator Sliding Block Spring Cap Screw, for 173045
	248ZA 19023	Clamp Stop Motion Clamp Stop Screw, for 45312
	256ZB 19023	Clamp Stop Motion Clamp Screw, for 45313
	330ZJ 19009	Thread Guard (front of Arm) Screw
	335X 19031	Feed Regulator Indicator Plate Screw
	400C 19027	Needle Bar Connecting Link Stud Adjusting Screw, for 189520
	440AL 19030	Needle Vibrator Zero Position Control Bearing Sleeve Set Screw (back)
	443AL 19023	Arm Shaft Bushing (front) Set Screw
	447AL 19031	Feed Regulator Stop Block Set Screw, for 105093
	448AL 19023	Arm Shaft Connection Belt Pulley Set Screw, for 173008
	448AL 19025	Feed Rock Shaft Bushing (front) Set Screw
	448AL 19024	Rotating Hook Driving Shaft Bushing (back) Set Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
	448AL 19024	Rotating Hook Driving Shaft Connection Belt Pulley Set Screw, for 173050
	448AL 19024	Rotating Hook Driving Shaft Spiral Gear Case Set Screw
	449AL 19031	Disc Follower Frame Hinge Pin Set Screw
	453AL 19028	Presser Bar Guide Bracket Set Screw, for 45237
	453AL 19009	Thread Take-up Spring Regulator Set Screw
	460AL 19031	Arm Cross Shaft Collar Set Screw, for 173003
	465AL 19025	Feed Forked Connection Shaft Adjusting Collar Set Screw, for 173064
	465AL 19024	Feed Lifting Rock Shaft Adjusting Collar Set Screw, for 189579
	465AL 19027	Needle Bar Connecting Link Stud Set Screw, for 189520
	465AL 19009	Slack Thread Regulator Set Screw
	591F 19026	Rotating Hook Bobbin Case Tension Regulating Screw, for 173063
	592E 19026	Rotating Hook Bobbin Case Latch Stop Screw, for 173058
	624AL 19027	Needle Bar Frame Supporting Bracket Set Screw
SS.664E	19023	Arm Shaft Bushing (back) Clamping Screw
	665ZB 19027	Needle Bar Height Indicator Screw, for 173039
SS.666AL	19024	Feed Throw-out Stop Screw
SS.667AL	19031	Feed Reversing Handle Binding Screw, for 105093
SS.669ZA	19030	Needle Vibrator Amplitude Regulating Lever Indent Clamping Screw, for 173046
	670E 19029	Arm Binding Screw
SS.675AL	19027	Needle Clamp Gib Position Screw, for 105264
SS.677AL	19024	Rotating Hook Shaft Adjusting Collar Set Screw, for 105135
SS.678AL	19024	Rotating Hook Driving Shaft Spiral Gear Timing Screw, for 105134
SS.684AL	19024	Rotating Hook Shaft Bushing Set Screw, for 105136
	691X 19021	Bracket Screw (to fasten to Machine) for 196619
SS.694J	19024	Feed Throw-out Eccentric Fork Thumb Screw, for 105255
SS.695AL	19031	Needle Bar Frame Pitman Fulcrum Pin (eccentric)
SS.696AL	19027	Needle Vibrator Rock Shaft Lever Slide Bushing Screw
SS.697X	19030	Needle Vibrator Zero Position Control Eccentric Set Screw, for 105179
SS.698ZA	19031	Feed Regulator Stop Screw
SS.704AL	19030	Needle Vibrator Zero Position Control Bearing Sleeve Set Screw (front)
	808AL 19025	Feed Regulator Connecting Rod Stud Set Screw, for 188925

No.	Plate	Name
889AL	19025	Feed Bar Hinge Pin Set Screw, for 173035
889AL	19025	Feed Bar Supporting Bracket Set Screw, for 173038
904AL	19031	Needle Bar Frame Pitman Retaining Collar Set Screw, for 105242
934E	19030	Needle Vibrator Amplitude Regulating Shaft Flange Fixing Screw, for 105172
1036C	19023	Thread Take-up Crank Position Screw, for 188949
1053E	19026	Rotating Hook Thread Guard Screw, for 276252
1065AL	19023	Needle Bar Crank Position Screw, for 188949
1120AL	19024	Feed Lifting Eccentric Set Screw, for 105132
1130E	19027	Needle Bar Connecting Link Hinge Block (upper) Cap Screw, for 105019
1131C	19027	Thread Take-up Lever Link Hinge Screw, for 105050
1161AL	19027	Needle Bar Connecting Link Hinge Pin Retainer Screw, for 105015
1253AL	19026	Rotating Hook Screw
1367D	19026	Rotating Hook Section Screw, for 276253
1380D	19026	Rotating Hook Bobbin Case Tension Spring Screw, for 173063
1423C	19031	Needle Bar Frame Pitman Driving Link Retaining Screw, for 173041
1423E	19030	Needle Vibrator Amplitude Regulating Shaft Screw, for 105108
1521X	19031	Needle Bar Frame Pitman Fulcrum Pin Nut
1550ZJ	19025	Feed Rock Shaft Connecting Link Slide Block Slide Bar Nut, for 189706
1550X	19027	Needle Vibrator Rock Shaft Lever Slide Bushing Nut
1607J	21378	Controller Resistance Unit Bell Crank Hinge Screw Nut, for 194418
1607J	21378	Controller Resistance Unit Yoke Hinge Screw Nut, for 194418
1637J	19025	Feed Rock Shaft Crank Hinge Screw Nut, for 189706
1637X	19024	Feed Throw-out Stop Screw Nut
1735X	19032	Disc Selector (front) Stud Nut, for 173033
1768X	21378	Three-Pin Terminal (female half) Housing Screw Nut, for 194521
2049	19025	Feed Forked Connection Pin, for 189705
2070	19028	Presser Bar Spring Washer
2102	19009	Tension Disc, for 105192
2974	19026	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin, for 40393
2975	19026	Rotating Hook Bobbin Case Latch Spring, for 173058
4389	19029	Arm Dowel Pin (for repairs only)
7071Z	19011	Bobbin Winder Tension Bracket Screw Washer
8366	19028	Presser Bar
8879	19029	Arm Side Cover (back) Spool Pin Washer (cloth) for 173011

NUMERICAL LIST OF PARTS

No.	Plate	Name
12329	19009	Tension Releasing Lever Spring
15072	19011	Bobbin Winder Bobbin Position Pin, for 105047
15170	19024	Feed Lifting Rock Shaft Crank Slide Block, for 125330
15287	19011	Bobbin Winder Friction Ring (rubber) for 105195
15288ZB	19011	Bobbin Winder Pulley, for 105046
23258	21378	Controller Resistance Unit Screw Washer (steel) for 194570
25537	19033	Screw Driver (machine) for 160977
26075	19028	Thread Cutter and Holder
27795	19027	Needle Bar Frame Supporting Bracket Set Screw Washer
32519	19027	Needle Bar Pin, for 105186
*32543	-----	Thread Take-up Lever Link Hinge Stud, for 188902
*32544	-----	Thread Take-up Lever Link, for 188902
32759	19009	Thread Take-up Spring Regulator with 50305C, for 105192
40392	19026	Rotating Hook Bobbin Case Latch, for 40393
40393	19026	Rotating Hook Bobbin Case Hinge com- plete, Nos. 2974, 40392 and 125320, for 173058
45237	19028	Presser Bar Guide Bracket with 453AL
45268	19011	Bobbin Winder Stop Latch, for 105195
45311	19023	Clamp Stop Motion Flanged Bushing, for 45313
45312	19023	Clamp Stop Motion complete, Nos. 248ZA, 45313, 51320AL and 171502
45313	19023	Clamp Stop Motion Flanged Bushing 45311 with 256ZB, for 45312
45339	19009	Tension Regulating Thumb Nut Engag- ing Pin, for 51681ZB
45826	19029	Arm Side Cover (back) Spool Pin Spring, for 173011
45847	19011	Bobbin Winder Tension Disc Spring, for 125396
45864	19009	Tension Indicator Flange, for 105192
45865	19009	Tension Indicator Flange Stop Washer, for 105192
		Nos. 45868 to 45870, for 105192
45868	19009	Tension Releasing Pin
45869	19009	Tension Spring
45870	19009	Tension Stud 140167ZJ with 51681ZB
45915	19011	Bobbin Winder Tension Disc, for 125396
45916	19011	Bobbin Winder Tension Disc Spring Disc, for 125396
50117C	19025	Feed Dog Screw, for 173056
50152ZJ	19024	Rotating Hook Driving Shaft Spiral Gear Case Clamping Screw
50156X	19030	Needle Vibrator Zero Position Tenon Plate Fixing Screw, for 173046
50222ZB	19029	Face Plate Screw
50234R	19024	Rotating Hook Driving Shaft Spiral Gear Case Cap Screw
50305C	19009	Thread Take-up Spring Regulator Screw, for 32759

No.	Plate	Name
50311AL	19030	Needle Vibrator Regulating Slide Set Screw, for 173044
50362E	19030	Needle Vibrator Amplitude Regulating Lever Indent Retaining Plate Screw, for 173046
50395AL	19023	Arm Cross Shaft Driving Worm Set Screw, for 105202
50395AL	19031	Arm Cross Shaft Worm Gear Set Screw, for 105206
50395AL	19023	Arm Shaft Thrust Collar Set Screw, for 105233
50429AL	19032	Disc Selector (back) Stud Set Screw, for 173033
51045AL	19029	Machine Hinge Set Screw
51093X	21378	Three-Pin Terminal (female half) Housing Screw, for 194521
51207X	24623	Pulley Set Screw
51224ZB	19029	Arm Side Cover Thumb Screw
51224ZB	19029	Face Plate Thumb Screw
51228ZB	19028	Pressure Regulating Thumb Screw, for 66773
51282ZJ	19028	Throat Plate Spring Screw (for all plates) for 105266, 105268 and 189632
51303ZB	19011	Bobbin Winder Stop Latch Hinge Screw, for 105195
51319ZB	19011	Bobbin Winder Frame Hinge Screw, for 105195
51320AL	19023	Clamp Stop Motion Flanged Bushing Set Screw, for 45312
51327J	21378	Controller Resistance Unit Short Circuiting Contact Screw
51340C	21378	Controller Resistance Unit Bell Crank Hinge Screw, for 194418
51340C	21378	Controller Resistance Unit Yoke Hinge Screw, for 194418
51681ZB	19009	Tension Regulating Thumb Nut with 45339, for 45870
51773X	19031	Needle Bar Frame Pitman Driving Link Hinge Stud Nut, for 173041
55623	19026	Rotating Hook Bobbin, for 160977
66564	19028	Presser Bar Lifter
66601	19011	Bobbin Winder Frame Spring, for 105195
66670	19011	Bobbin Winder Frame, for 105046
66752	19028	Pressure Regulating Thumb Screw Plug (felt wick) for 66773
66773	19028	Pressure Regulating Thumb Screw 51228ZB with 66752
86613	19033	Screw Driver (Bobbin Case) for 160977
86616	19012	Presser Foot, for Buttonhole work, for 160977
105004	19029	Face Plate Thread Guard, for 189541
105011	19024	Feed Lifting Rock Shaft, for 105255
105012	19025	Feed Rock Shaft
105013	19025	Feed Rock Shaft Adjusting Collar with two 183026AL
105014	19025	Feed Rock Shaft Bushing (front) Nos. 105015 to 105017, for 105018
105015	19027	Needle Bar Connecting Link with 1161AL

NUMERICAL LIST OF PARTS

No.	Plate	Name
105016	19027	Needle Bar Connecting Link Hinge Pin Retainer
105017	19027	Needle Bar Connecting Link Hinge Pin
105018	19027	Needle Bar Connection, Nos. 105015, 105016, 189515, 189518 and two 105017, for 105019
105019	19027	Needle Bar Connection complete, Nos. 1130E, 105018, 183012C, 189514 and 189520, for 105050
105034	19026	Rotating Hook Bobbin Case Holder Position Bracket
105035	19026	Rotating Hook Bobbin Case Tension Spring, for 173063
105038	19024	Rotating Hook Driving Shaft Spiral Gear Case Cover
105039	19026	Rotating Hook Section, for 276253
105040	19024	Rotating Hook Shaft
105041	19024	Rotating Hook Shaft Bushing
105042	19026	Rotating Hook Thread Guard, for 276252
105046	19011	Bobbin Winder Frame 66670 with 15288ZB and 105047, for 105195
105047	19011	Bobbin Winder Spindle with 15072, for 105046
105049	19024	Rotating Hook Driving Shaft Bushing (back)
105050	19027	Thread Take-up Lever complete, Nos. 1131C, 105019 and 188902
105072	19023	Hand Wheel, 1/4 in. "V" belt (outside diam. of belt groove 3-1/2 in.)
105080	19029	Arm Binding Screw Washer
105083	19023	Arm Shaft Bushing (back) Pad (felt)
105093	19031	Feed Regulator Stop Block 105130 with 447AL and SS. 667AL
105101	19030	Needle Vibrator Amplitude Regulating Lever Plunger, for 105172
105102	19030	Needle Vibrator Amplitude Regulating Lever Plunger Spring, for 105172
105103	19030	Nos. 105103 to 105105, for 173046 Needle Vibrator Amplitude Regulating Lever Indent Plate
105104	19030	Needle Vibrator Amplitude Regulating Lever Indent Clamping Pad
105105	19030	Needle Vibrator Amplitude Regulating Lever Indent Retaining Plate with 105129
105106	19030	Nos. 105106 to 105108, for 105172 Needle Vibrator Amplitude Regulating Shaft Stop Shoe
105107	19030	Needle Vibrator Amplitude Regulating Shaft Stop Shoe Spring
105108	19030	Needle Vibrator Amplitude Regulating Shaft with 1423E
105109	19030	Needle Vibrator Indicator Ring, for 173046
105116	19030	Needle Vibrator Zero Position Control Bearing Sleeve, for 173046
105117	19030	Needle Vibrator Zero Position Control Bearing Sleeve Thrust Washer, for 173046

No.	Plate	Name
105119	19030	Needle Vibrator Zero Position Control Lever, for 173046
105120	19030	Needle Vibrator Zero Position Control Bushing with 140082E, for 173046
105129	19030	Needle Vibrator Amplitude Regulating Shaft Friction Spring, for 105105
105130	19031	Feed Regulator Stop Block, for 105093
105132	19024	Feed Lifting Eccentric with two 1120AL, for 105255
105134	19024	Rotating Hook Driving Shaft Spiral Gear with SS. 678AL and 183026AL
105135	19024	Rotating Hook Shaft Adjusting Collar with two SS. 677AL
105136	19024	Rotating Hook Driving Shaft Spiral Gear Case with SS. 684AL
105149	19025	Feed Dog, for 105266 and 173056
105150	19030	Needle Vibrator Amplitude Regulating Lever, for 105172
105159	19029	Face Plate, for 105160
105160	19029	Face Plate 105159 with two 189541
105161	19024	Feed Lifting Eccentric Fork, for 105255
105162	19031	Feed Regulator Indicator Plate
105163	19031	Feed Regulator Lever
105165	19031	Feed Reversing Handle
		Nos. 105166 to 105168, for 105255
105166	19024	Feed Throw-out Crank
105167	19024	Feed Throw-out Eccentric Fork Thumb Screw Clip
105168	19024	Feed Throw-out Spring
105169	19027	Needle Bar Frame, for 173039
105172	19030	Needle Vibrator Amplitude Regulating Lever complete, Nos. 105101, 105102, 105106 to 105108, 105150 and three 934E, for 173046
105175	19027	Needle Vibrator Rock Shaft Lever Slide Bushing
105179	19030	Needle Vibrator Zero Position Control Eccentric with SS. 697X, for 173046
105180	19024	Rotating Hook Driving Shaft
105181	19009	Thread Guard (front of Arm)
105183	19023	Arm Shaft Bushing (front)
*105184	-----	Bed
105185	19009	Tension Middle Disc, for 105192
105186	19027	Needle Bar (hollow) with 32519, for 173042
105190	19027	Needle Clamp Gib, for 173057
105192	19009	Tension (graduated) complete, Nos. 32759, 45864, 45865, 45868 to 45870, 105185, 105193, 125421 and two 2102
105193	19009	Thread Take-up Spring, for 105192
105194	19011	Bobbin Winder Bracket (Belt Cover) for 105195
105195	19011	Bobbin Winder complete, Nos. 190ZB, 15287, 45268, 51303ZB, 51319ZB, 66601, 105046, 105194, 125326 and 125462
105202	19023	Arm Cross Shaft Driving Worm with two 50395AL
105206	19031	Arm Cross Shaft Worm Gear with two 50395AL

NUMERICAL LIST OF PARTS

No.	Plate	Name
105209	19031	Disc Follower Frame Hinge Pin
105210	19031	Disc Follower Frame Locating Collar with 200AL
105214	19031	Needle Bar Frame Pitman
105215	19031	Needle Bar Frame Pitman Crank with 180C
105216	19031	Needle Bar Frame Pitman Driving Link
105220	19030	Needle Vibrator Zero Position Tenon Plate with two 175C, for 173046
105233	19023	Arm Shaft Thrust Collar with two 50395AL
105234	19031	Disc Retaining Nut Friction Washer (rubber) for NN. 122ZA
105235	19031	Feed Regulator Lever Friction Fork
105242	19031	Needle Bar Frame Pitman Retaining Collar with 904AL
105243	19027	Needle Bar Frame Return Spring Thim- ble
105244	19027	Needle Bar Frame Return Spring
105248	19012	Presser Foot (hinged) for Straight Stitching complete, Nos. 105245 to 105247, for 160977
105249	19028	Presser Foot Sole, for 105250
105250	19028	Presser Foot (hinged) complete, Nos. 105249, 189644 and 189645
105251	19012	Satin Stitch Foot, for Applique, Wide Ornamental and Zig-Zag Seams, for 160977
105255	19024	Feed Lifting Rock Shaft and Eccentric Fork complete, Nos. 157AL, SS. 694J, 105011, 105132, 105161, 105166 to 105168 and 189579
105260	19023	Machine Handle, for 173013
105261	19023	Machine Handle Spring, for 173013
105263	19027	Needle Clamp, for 105264
105264	19027	Needle Clamp 105263 with SS. 675AL and 140545ZJ, for 173057
105265	19028	Throat Plate (with oblong needle hole) for 105266
105266	19028	Throat Plate 105265 with 189625 and two 51282ZJ, for 105149
105267	19033	Throat Plate only (Straight Stitching) for 105268
105268	19033	Throat Plate complete (for Straight Stitching) Nos. 105267, 189625 and two 51282ZJ, for 160977
105278	19028	Presser Bar Spring
120598	19033	Ruffler (1, 6 and 12 stitch) for 160977
120861	19033	Oil Can, contents 3 fluid oz. (filled with household oil)
125060	19024	Feed Lifting Rock Shaft Crank Slide Block Stud, for 125330
125320	19026	Rotating Hook Bobbin Case Latch Lever, for 40393
125326	19011	Bobbin Winder Tripping Arm, for 105195
125330	19024	Feed Lifting Rock Shaft Crank Slide Block 15170 with 125060, for 188952
125373	19029	Face Plate Thread Guard Rivet, for 189541

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
125395	19011	Bobbin Winder Tension Bracket, for 125396
125396	19011	Bobbin Winder Tension Bracket complete, Nos. 45847, 45915, 45916, 125395 and 140138B
125421	19009	Tension Indicator, for 105192
125462	19011	Bobbin Winder Stop Latch Spring, for 105195
140082E	19030	Needle Vibrator Zero Position Control Bushing Screw, for 105120
140099X	21378	Controller Base Screw, for 194584
140100X	-----	Controller Resistance Unit Bell Crank Spring Bracket Screw, for 194570
140103X	21378	Controller Resistance Unit Screw, for 194570
140138B	19011	Bobbin Winder Tension Screw, for 125396
140167ZJ	19009	Tension Stud, for 45870
140376X	24623	End Cover Screw
140433X	24623	Brush Cover Screw
140512X	19021	Bracket Screw (to fasten to SINGER Light Body) for 196619
140545ZJ	19027	Needle Clamp Thumb Screw, for 105264
140740J	19023	Machine Handle Spring Screw, for 173013
140760ZB	19023	Arm Top Cover Screw
160845	Nos. 19012	160845 to 160847, for 160977
160845	19012	Presser Foot (left toe) for Edge Stitching and Zipper Work
160846	19012	Presser Foot (right toe) for Edge Stitching and Zipper Work
160847	19012	Binder (multi-slotted)
160977	-----	Attachment Set complete, Nos. 25537, 86613, 86616, 105248, 105251, 105268, 120598, 160845 to 160847, 189632, 189648, 189653, twin needle 306x1-3, four 55623 and six needles 206x13
170057	19023	Machine Handle Hinge Pin, for 173013
170168	19023	Arm Top Cover Oil Metering Insert, for 173012
171502	19023	Clamp Stop Motion Clamp Washer, for 45312
*173001	-----	Arm
173002	19031	Arm Cross Shaft
173003	19031	Arm Cross Shaft Collar with two 460AL
173004	19023	Arm Shaft Bushing (back)
173008	19023	Arm Shaft Connection Belt Pulley with two 448AL
173009	19029	Arm Side Cover (back) for 173011
173011	19029	Arm Side Cover (back) complete, Nos. 173009, two each 8879 and 45826
173012	19023	Arm Top Cover with three 170168, for 173013
173013	19023	Arm Top Cover with Machine Handle complete, Nos. 105260, 173012, two each 105261, 140740J and 170057
173014	19031	Disc Bushing
173015	Nos. 19032	173015 to 173032, for 173033
173015	19032	Disc Follower Frame

NUMERICAL LIST OF PARTS

No.	Plate	Name
173016	19032	Disc Selector (No Marking, for interchangeable disc)
173017	19032	Disc Selector (Marked Zig-Zag Stitch, for Disc No. 276301)
173018	19032	Disc Selector (Marked Multiple Zig-Zag Stitch, for Disc No. 276302)
173019	19032	Disc Selector (Marked Scalloped Stitch, for Disc No. 276304)
173020	19032	Disc Selector (Marked Zig-Zag Point Stitch, for Disc No. 276314)
173021	19032	Disc Selector (Marked Ball Stitch, for Disc No. 276319)
173022	19032	Disc Selector Locking Pin
173023	19032	Disc Selector Locking Pin Spring
173024	19032	Disc Selector Locking Pin Spring Retainer (back)
173025	19032	Disc Selector Locking Pin Spring Retainer (front)
173026	19032	Disc Selector Spacing Washer (inside 1/32 in.)
173027	19032	Disc Selector Spacing Washer (outside 1/64 in.)
173028	19032	Disc Selector (back) Stud
173029	19032	Disc Selector (back) Stud Spring
173030	19032	Disc Selector (front) Stud
173031	19032	Disc Selector (front) Stud Friction Washer
173032	19032	Disc Selector (front) Stud Washer
173033	19032	Disc Follower Frame complete, Nos. 1735X, 50429AL, 173015 to 173021, 173024, 173025, 173028 to 173032, two 173027, four 173026, five 223J and six each 173022 and 173023
173034	19031	Disc Washer Nos. 173035 to 173038, for 173056
173035	19025	Feed Bar with two 889AL
173036	19025	Feed Bar Hinge Pin
173037	19025	Feed Bar Hinge Pin Retainer
173038	19025	Feed Bar Supporting Bracket with two 889AL
173039	19027	Needle Bar Frame 105169 with 665ZB and 173043, for 173042
173040	19031	Needle Bar Frame Pitman Driving Link Hinge Stud, for 173041
173041	19031	Needle Bar Frame Pitman Driving Link Hinge Stud 173040 with 1423C and 51773X
173042	19027	Needle Bar Frame 173039 with 105186, for 173057
173043	19027	Needle Bar Height Indicator, for 173039
173044	19030	Needle Vibrator Regulating Slide with two 50311AL, for 173045
173045	19030	Needle Vibrator Regulating Slide 173044 with 173049 and two 229E, for 173046
173046	19030	Needle Vibrator Regulating Device complete, Nos. SS. 669ZA, 105103 to 105105, 105109, 105116, 105117, 105119, 105120, 105172, 105179, 105220, 173045, two 50156X and three 50362E

No.	Plate	Name
173047	19031	Needle Vibrator Sliding Block
173048	19031	Needle Vibrator Sliding Block Spring
173049	19030	Needle Vibrator Sliding Block Spring Cap, for 173045
173050	19024	Rotating Hook Driving Shaft Connection Belt Pulley with two 448AL
173052	19023	Arm Shaft
173056	19025	Feed Bar complete, Nos. 105149, 173035 to 173038 and two 50117C
173057	19027	Needle Bar Frame complete, Nos. 105190, 105264 and 173042
173058	19026	Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 173063, for 173062
173059	19026	Rotating Hook Bobbin Case Holder, for 173061
173060	19026	Rotating Hook Bobbin Case, for 173063
173061	19026	Rotating Hook 276253 with 173059, for 173062
173062	19026	Rotating Hook and Bobbin Case com- plete, Nos. 173058 and 173061
173063	19026	Rotating Hook Bobbin Case 173060 with 591F, 1380D and 105035, for 173058
173064	19025	Feed Forked Connection Shaft Adjusting Collar with two 465AL
183012C	19027	Needle Bar Connecting Link Stud Cap Screw, for 105019
183015C	19027	Needle Bar Frame Supporting Bracket Hinge Screw
183016C	19025	Feed Rock Shaft Crank Hinge Screw, for 189706
183017C	19025	Feed Rock Shaft Connecting Link Slide Block Slide Bar, for 189706
183018C	19031	Feed Regulator Lever Hinge Screw
183020C	19031	Needle Bar Frame Pitman Hinge Screw
183022ZB	19028	Presser Foot Thumb Screw
183026AL	19024	Feed Eccentric Set Screw, for 188927
183026AL	19025	Feed Rock Shaft Adjusting Collar Set Screw, for 105013
183026AL	19024	Rotating Hook Driving Shaft Spiral Gear Set Screw, for 105134
183038C	19027	Needle Bar Frame Supporting Bracket
188417	19031	Needle Vibrator Rock Shaft Lever
*188901	-----	Thread Take-up Lever, for 188902
188902	19027	Thread Take-up Lever 188901 with 32543 and 32544, for 105050
188925	19025	Feed Rock Shaft Connecting Link with 808AL, for 189706
188926	19025	Feed Rock Shaft Connecting Link Slide Block, for 189706
188927	19024	Feed Eccentric with two 183026AL
188949	19023	Needle Bar Crank with 1036C and 1065AL
188952	19024	Feed Lifting Rock Shaft Crank with 158E and 125330
189514	19027	Thread Take-up Crank, for 105019
189515	19027	Needle Bar Connecting Link Hinge Block (upper) for 105018
189518	19027	Needle Bar Connecting Link Hinge Block (lower) for 105018

NUMERICAL LIST OF PARTS

No.	Plate	Name
189520	19027	Needle Bar Connecting Link Stud with 400C and 465AL, for 105019
189537	19009	Tension Releasing Lever
189538	19009	Slack Thread Regulator
189541	19029	Face Plate Thread Guard 105004 with 125373, for 105160
189542	19023	Arm Shaft Connection Belt
189572	19025	Feed Rock Shaft Crank with 158E, for 189706
189577	19025	Feed Forked Connection, for 189705
189578	19025	Feed Forked Connection Shaft, for 189705
189579	19024	Feed Lifting Rock Shaft Adjusting Collar with two 465AL, for 105255
189588	19031	Feed Regulator Connecting Rod
189589C	19031	Feed Regulator Connecting Rod Stud
189625	19028	Throat Plate Spring (for all plates) for 105266, 105268 and 189632
189631	19033	Embroidery Plate only (less spring) for 189632
189632	19033	Embroidery Plate complete, Nos. 189625, 189631 and two 51282ZJ, for 160977
189644	19028	Presser Foot Shank, for 105250
189645	19028	Presser Foot Hinge Pin, for 105250
189648	19012	Presser Foot, for Button Sewing, for 160977
189653	19012	Hemmer Foot, for Shell Seams, for 160977
189705	19025	Feed Forked Connection 189577 with 2049 and 189578, for 189706
189706	19025	Feed Forked Connection complete, Nos. 1550ZJ, 1637J, 183016C, 183017C, 188925, 188926, 189572 and 189705
190613	19021	Tube filled with Singer Motor Lubricant
192140	21378	Controller Resistance Unit, for 95 to 145 Volts, for 194570
192692	-----	Three-Pin Terminal (female half) Insert Clamp, for 194521
192851	19021	Lead Wire for Controller
193231	24623	Pulley (moulded)
193384	21378	Controller Resistance Unit Short Circuiting Contact
194120	19021	SINGER Light Lamp (state voltage required)
194321	21378	Controller Foot Pedal, for 194584
194402	21378	Controller Resistance Unit Bell Crank Spring Bracket, for 194418
194404	21378	Controller Resistance Unit Bell Crank Spring, for 194570
194407	21378	Controller Base Cushion (rubber) for 194584
194416	21378	Controller Resistance Unit Bell Crank, for 194418
194418	-----	Controller Resistance Unit Bell Crank Spring Bracket 194402 with 194416, 194773, two each 1607J and 51340C, for 194570
194514	-----	Controller Resistance Unit Bell Crank Spring Bracket Screw Insulating Disc, for 194570

No.	Plate	Name
194521	21378	Three-Pin Terminal (female half) complete, Nos. two each 1768X, 51093X and three 192692
194570	-----	Controller Base 194572 with 192140, 194418, 194774, 194775, two each 23258, 140100X, 140103X, 194404, 194514 and 931090, for 194584
194572	21378	Controller Base, for 194570
194573	21378	Controller Cover, for 194584
194574	21378	Controller Lead Cord, complete with Three-Pin Terminal (female half) from lamp socket to Three-Pin Terminal and Controller, for 194584
194584	21378	Controller (bakelite, foot) complete, for 95 to 145 Volts, A. C. or D. C. Motor, Nos. 194321, 194570, 194573, 194574, 899815, two 964317, four each 140099X and 194407
194717	24623	Motor Lead Strain Relief
194773	21378	Controller Resistance Unit Yoke, for 194418
194774	21378	Controller Resistance Unit Adjusting Nut, for 194570
194775	21378	Controller Resistance Unit Adjusting Nut Lock Spring, for 194570
195130	19021	Body Snap Ring (small) for 196619
195137	-----	Nos. 195137 to 195139, for 195957
195138	-----	Switch Rotating Contact
195139	-----	Switch Rotating Contact Cam
195141	19021	Switch Rotating Contact Cam Insulator
195143	-----	Spring Contact (lead end) for 196621
195279	19021	Switch Key Snap Ring, for 195958
195280	19021	Lens (Blue Glass) for 196619
195281	19021	Body (upper half) for 195958
195282	19021	Body (lower half) for 196619
195351	19021	Shade, for 196619
195352	19021	Spring Contact and Holder, for 196621
195357	19021	Body Snap Ring (large) for 196619
195358	19021	Reflector, for 196619
195540	24623	Shade Holder, for 196619
195541	24623	Armature Shaft Bearing
195543	24623	Armature Shaft Bearing Retainer
195544	24623	Brush Cover
195545	24623	Field Core Wedge
195546	24623	End Cover Insert (brass)
195547	24623	End Cover (commutator end) Washer (felt)
195638	24623	Brush Holder
195640	24623	Armature complete, for BA3-8 Motor
195871	24623	Field Coil complete, for BA3-8 Motor
195874	24623	Field Core complete
195926	24623	Brush Lead Terminal
195957	19021	End Cover (pulley end) with Grease Tube
195958	19021	Switch Rotating Contact 195137 with 195138 and 195139, for 196619
195966	24623	Body (upper half) 195280 with 195143, 196240 and 931728, for 196619
		End Cover (commutator end) for BA3-8 Motor with Name Plate


NUMERICAL LIST OF PARTS

No.	Plate	Name
196240	19021	Switch Key, for 195958
196618	19021	Bracket, for 196619
196619	19021	SINGER Light (Blue Glass) complete (less lamp) Nos. 691X, 195130, 195279, 195281, 195282, 195357, 195957, 195958, 196618, 196621, two each 140512X, 195352 and 195358
196621	19021	Lead with Terminal Clips and Spring Contacts complete, Nos. 195141 and 195351, for 196619
196861	24623	Brush Spring
196862	24623	Brush (carbon)
198651	19021	Belt (moulded)
228485	-----	Class Number Plate Drive Screw
276251	19026	Rotating Hook with two 1253AL, for 276252
276252	19026	Rotating Hook 276251 with 105042 and four 1053E, for 276253
276253	19026	Rotating Hook 276252 with 105039 and three 1367D, for 173061
276301	19031	Disc, No. 1, Zig-Zag Stitch (in Machine)
276302	19031	Disc, No. 2, Multiple Zig-Zag Stitch (in Machine)
276303	19031	Disc, No. 3, Blind Stitch (in Machine)
276304	19031	Disc, No. 4, Scallop Stitch (in Machine) Nos. 276305 to 276313, for 276400
276305	19014	Disc, No. 5, Arrowhead Stitch
276306	19014	Disc, No. 6, Domino Stitch
276307	19015	Disc, No. 7, Shell Edge Stitch
276308	19015	Disc, No. 8, Solid Scallop Stitch
276309	19015	Disc, No. 9, Icicle Stitch
276310	19015	Disc, No. 10, Banner Stitch
276311	19016	Disc, No. 11, Key Stitch
276312	19016	Disc, No. 12, Walls of Troy Solid Stitch
276313	19016	Disc, No. 13, Solid Diamond Stitch
276314	19031	Disc, No. 14, Zig-Zag Point Stitch (in Machine) Nos. 276315 to 276318, for 276400
276315	19017	Disc, No. 15, Long Oblique Stitch
276316	19017	Disc, No. 16, Shingle Stitch
276317	19017	Disc, No. 17, Pennant Stitch
276318	19017	Disc, No. 18, Three-Step Stitch
276319	19031	Disc, No. 19, Ball Stitch (in Machine) Nos. 276320 to 276330, for 276400
276320	19017	Disc, No. 20, Curved Mending Stitch
276321	19018	Disc, No. 21, Thunderbird Stitch
276322	19018	Disc, No. 22, Semaphore Stitch
276323	19018	Disc, No. 23, Solid Pyramid Stitch
276324	19018	Disc, No. 24, Open Pyramid Stitch
276325	19018	Disc, No. 25, Spiny Stitch
276326	19018	Disc, No. 26, Block Stitch
276327	19019	Disc, No. 27, Fagotting Stitch
276328	19019	Disc, No. 28, Comb Stitch
276329	19019	Disc, No. 29, Pavilion Stitch
276330	19019	Disc, No. 30, Platform Stitch
276400	-----	Set No. 8 of Discs complete, Nos. 276305 to 276313, 276315 to 276318 and 276320 to 276330
701792	24623	End Cover (pulley end) Washer (felt)


NUMERICAL LIST OF PARTS

35


No.	Plate	Name
*899815	-----	Name Plate, for 194584
931090	-----	Controller Resistance Unit Screw Washer (asbestos) for 194570
931728	-----	Switch Key Spring Washer, for 195958
964317	-----	Name Plate Drive Screw, for 194584
964514	24623	Field Coil Wedge

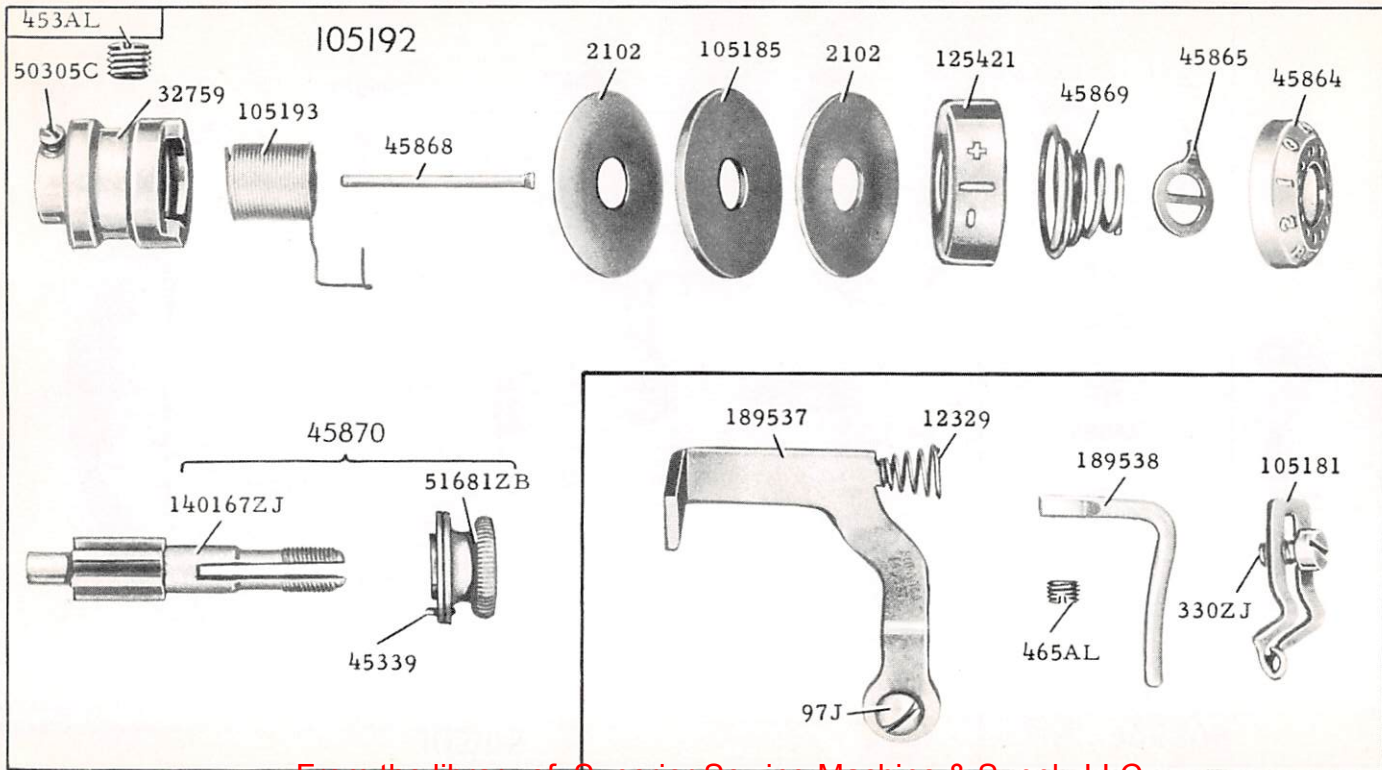

19009

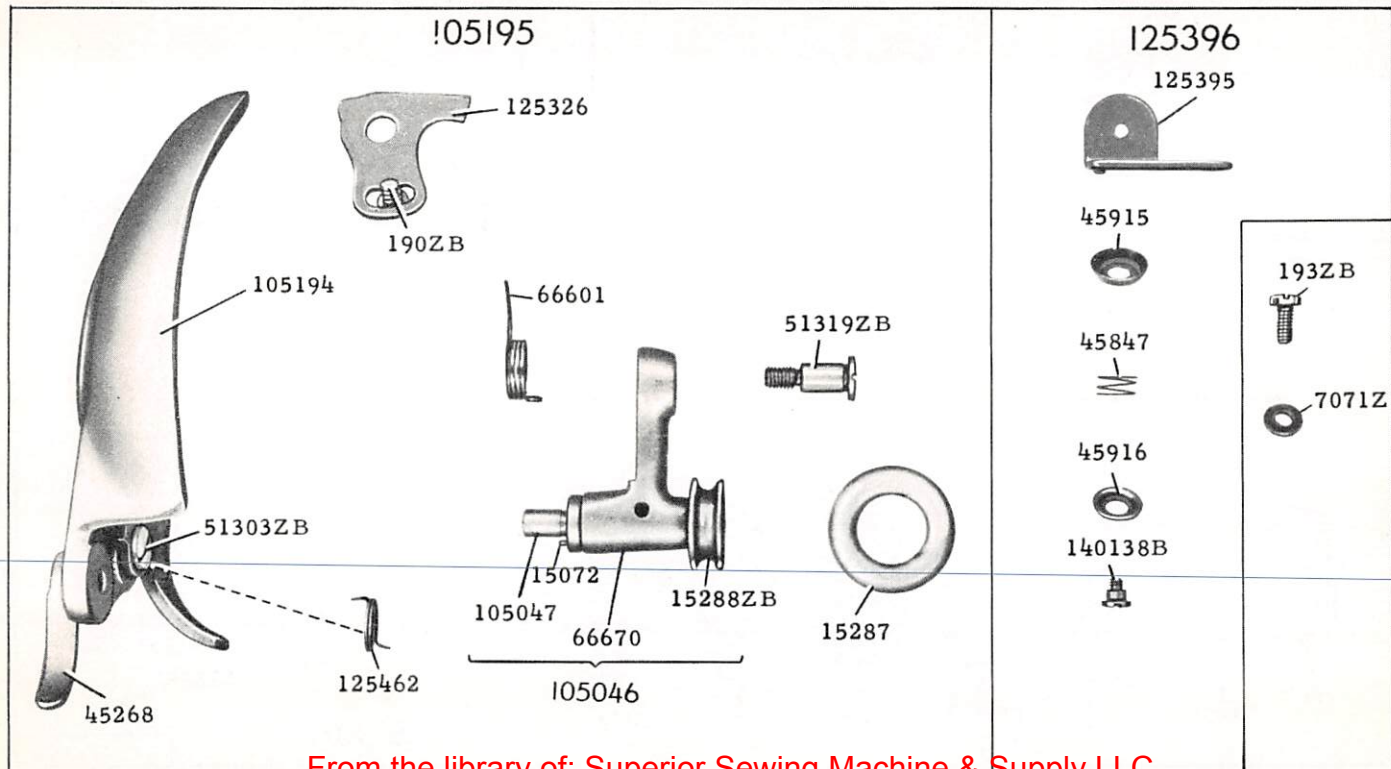


From the library of: Superior Sewing Machine & Supply LLC

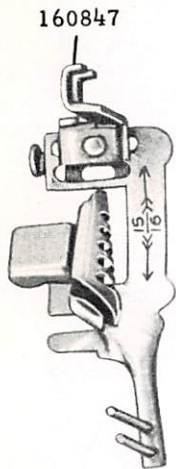


19012 - 2/3


276301

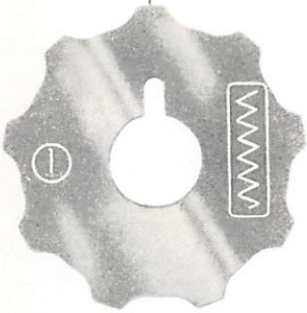


276302

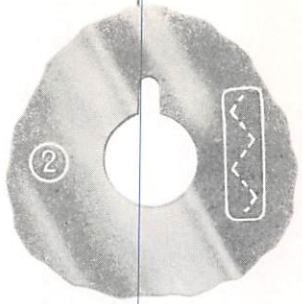


276303

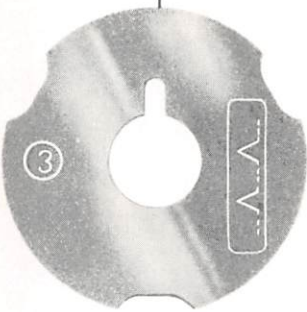


276304

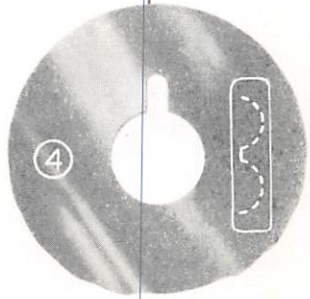


276305

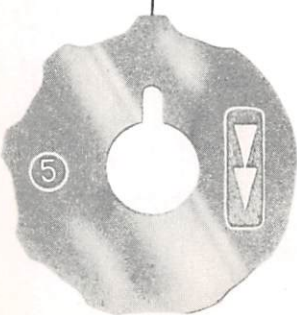


276306

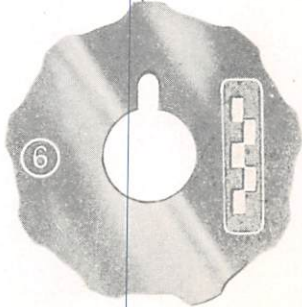


276307

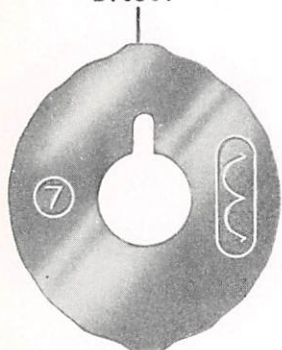


276308

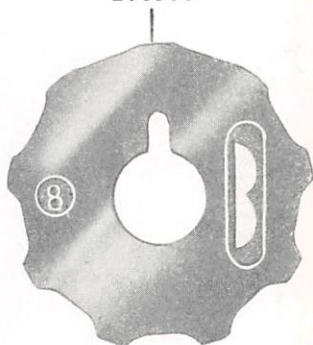


276309

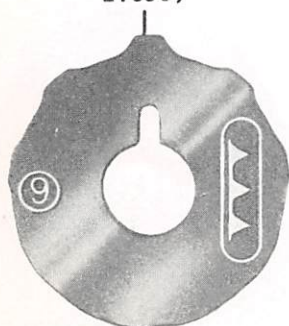


276310

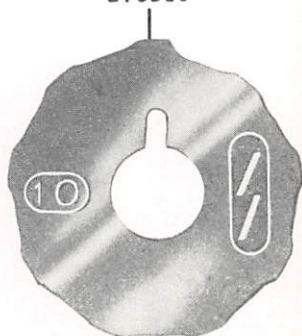


276311

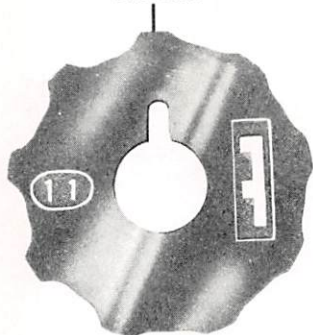


276312

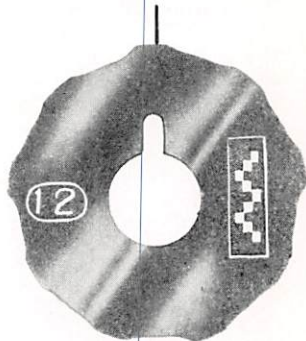


276313

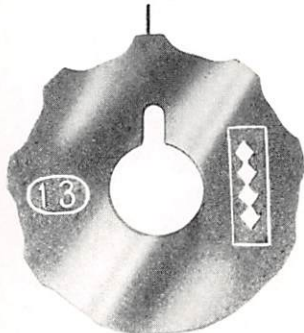


276314

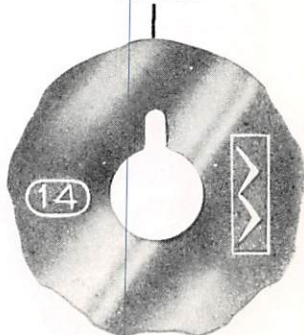


276315

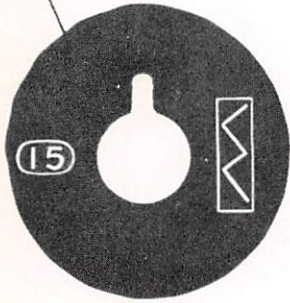


276316

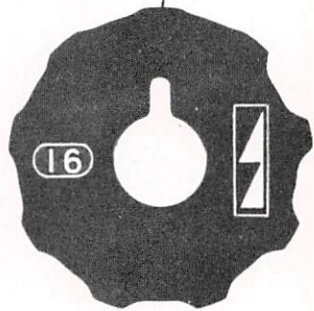


276317

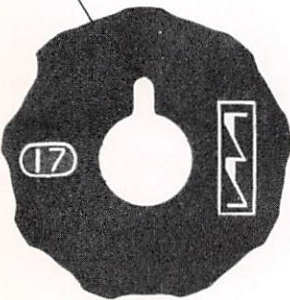

276318

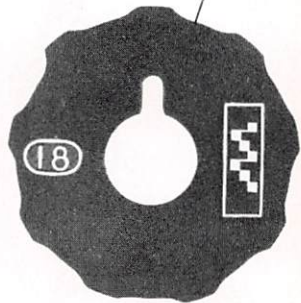


276319

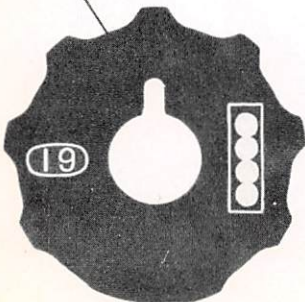


276320



276321

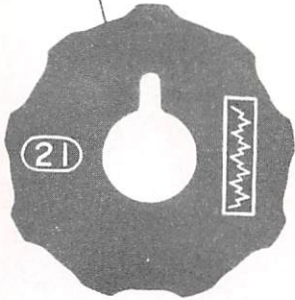


276322

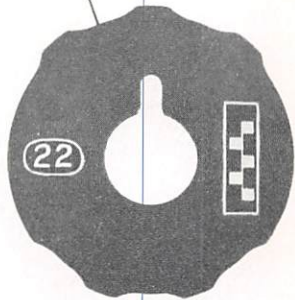


276323




276324

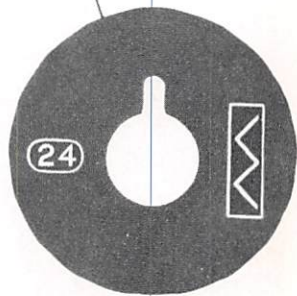


276325

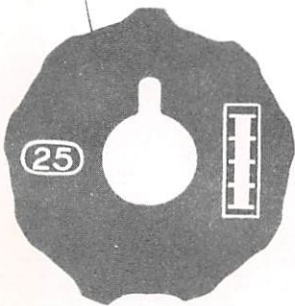


276326

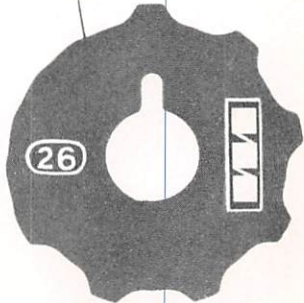


276327

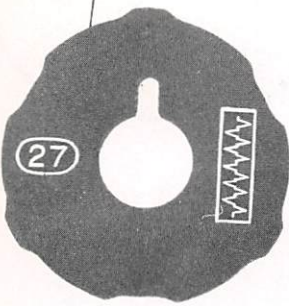


276328

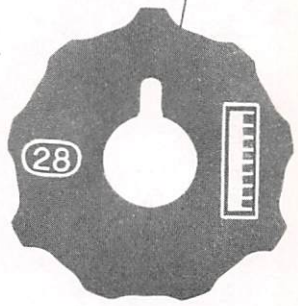


276329

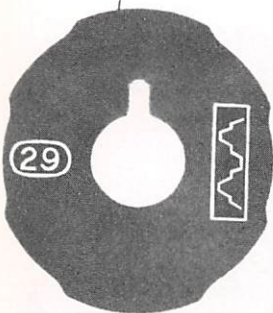


276330

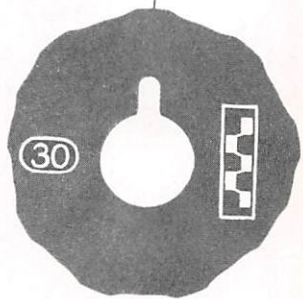

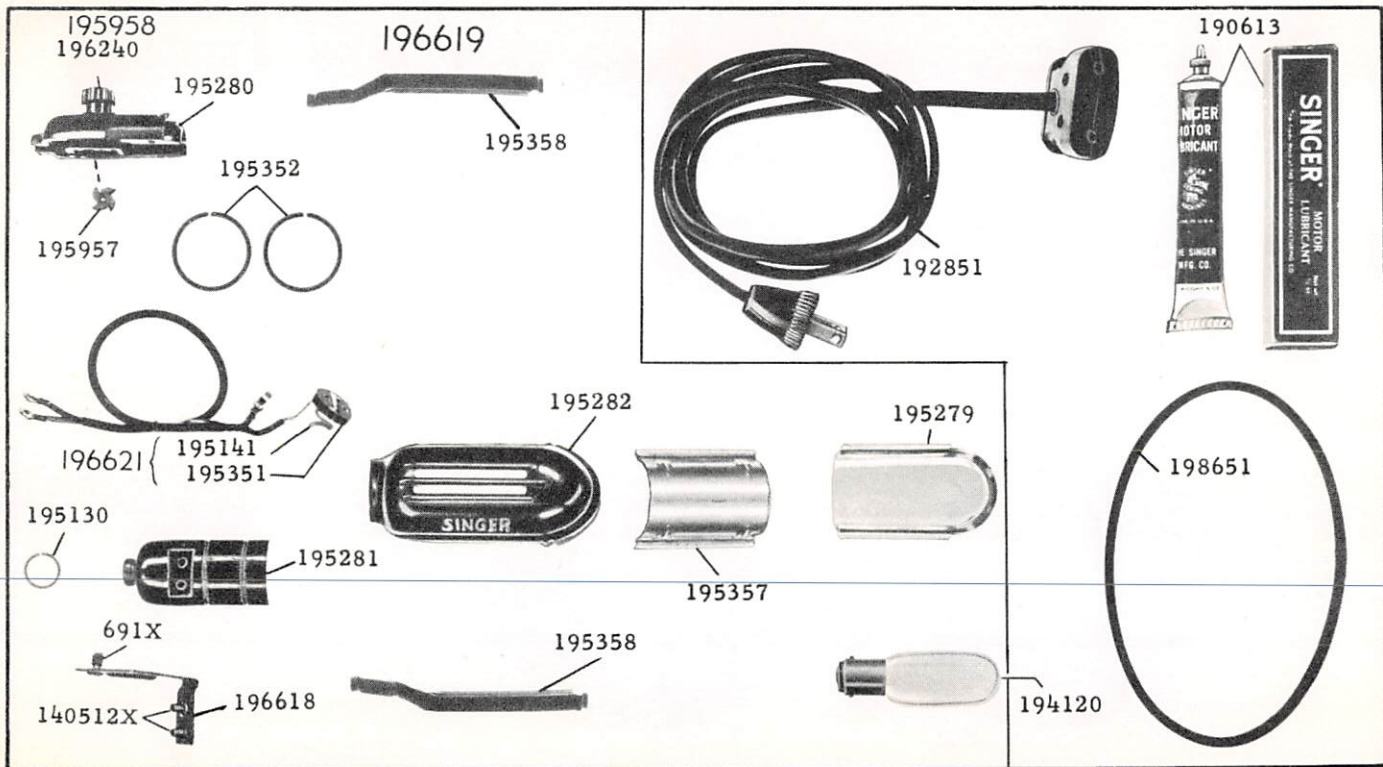


19021 - 1/3

From the library of: Superior Sewing Machine & Supply LLC

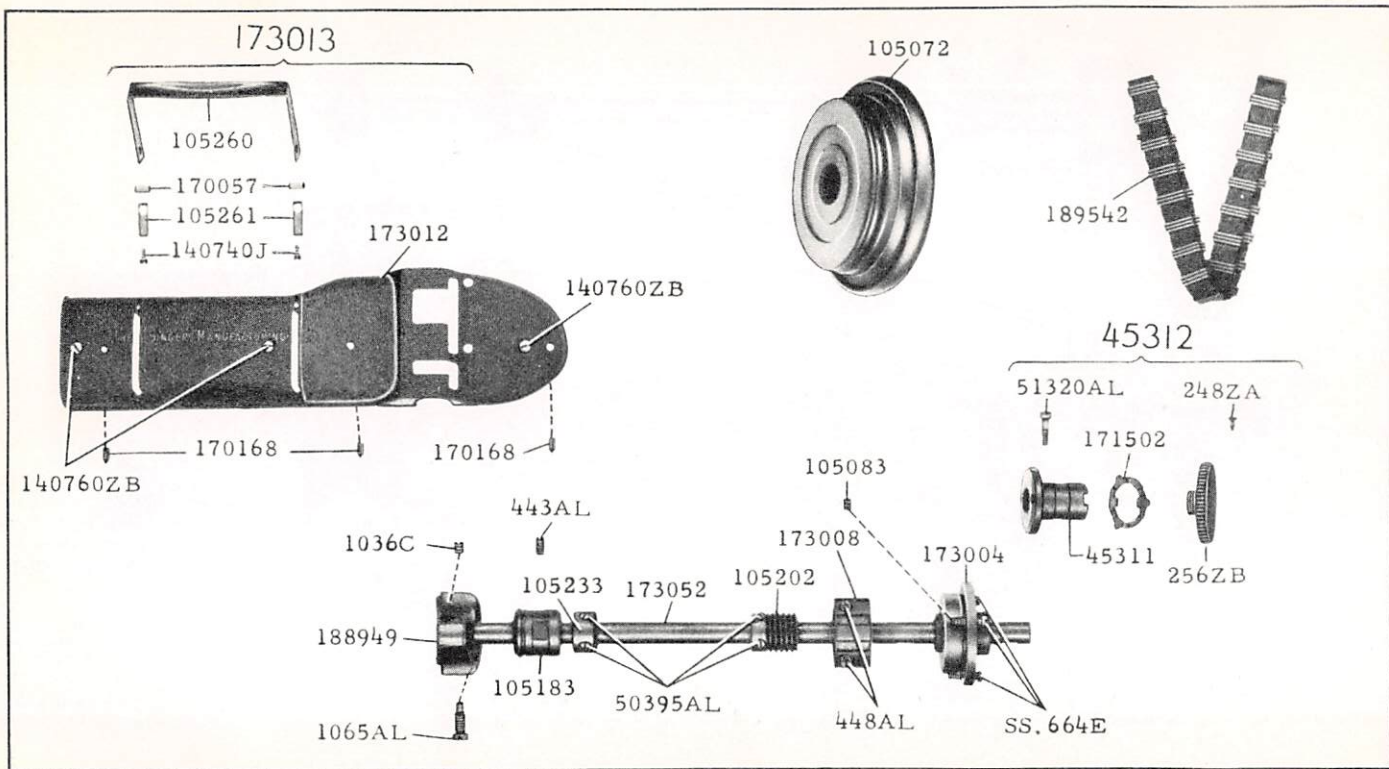


19023 - 1/4

From the library of: Superior Sewing Machine & Supply LLC

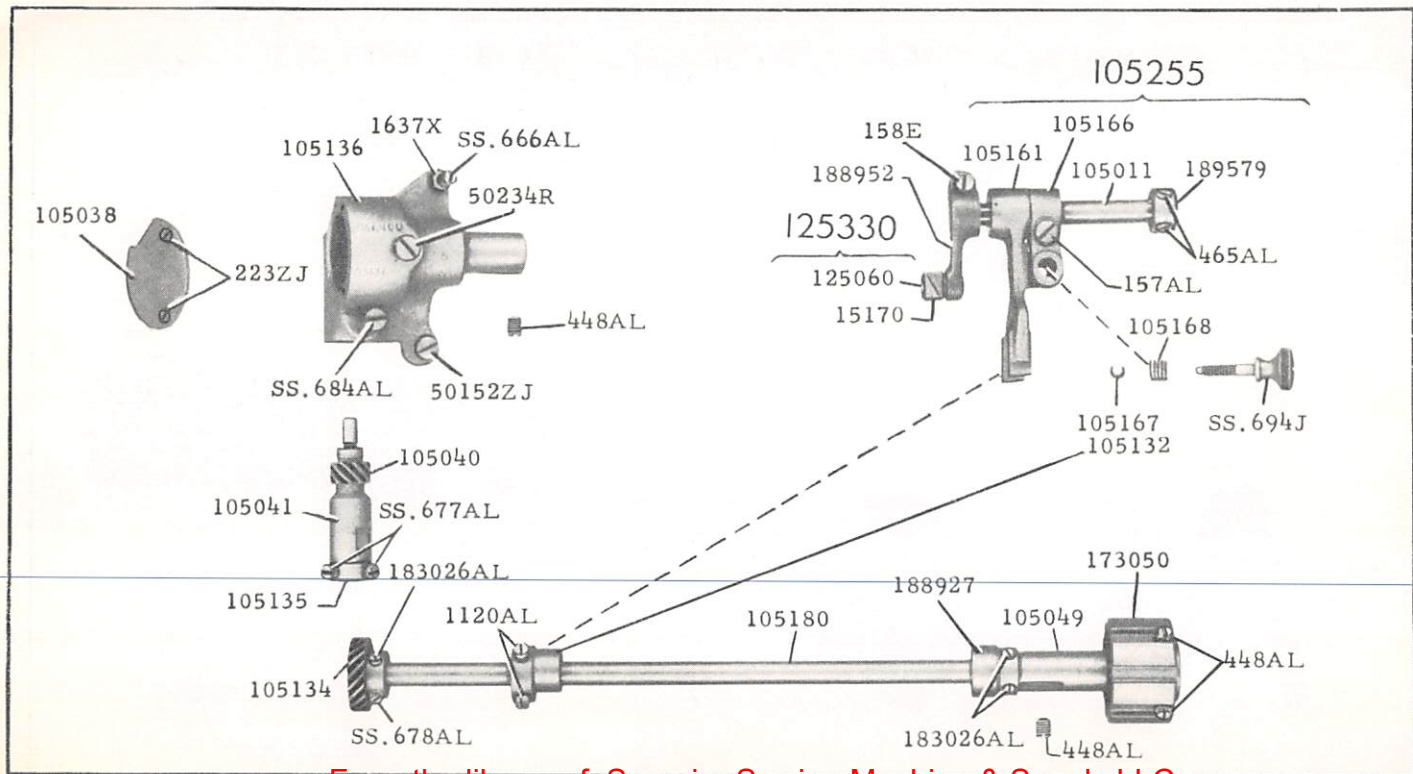

19024 - 3/8

From the library of: Superior Sewing Machine & Supply LLC

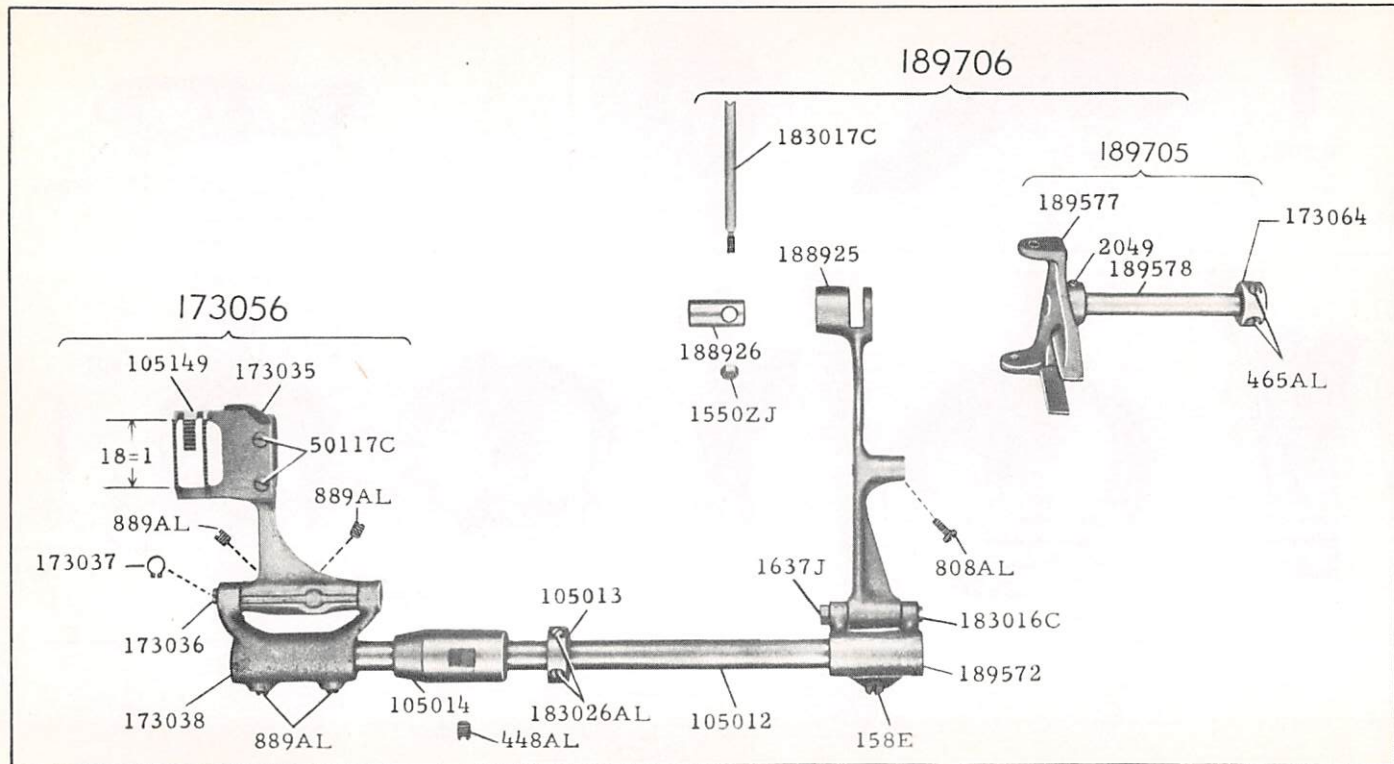

19025 - 3/8

From the library of: Superior Sewing Machine & Supply LLC

173062

173061

276253

276252

173058


173063

173060

2975




105035

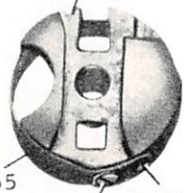

591F

1380D

173059

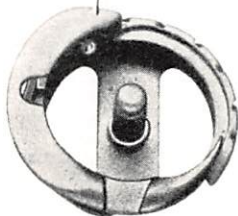


1367D




105039

 
1253AL



276251

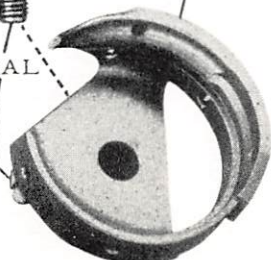

105042

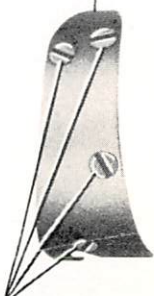

1053E

 
40393

592E


40392

2974


125320



55623

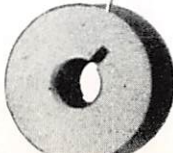


105034

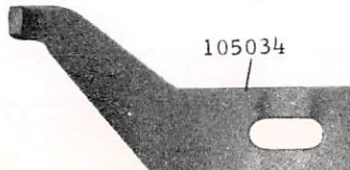

190Z B




19026




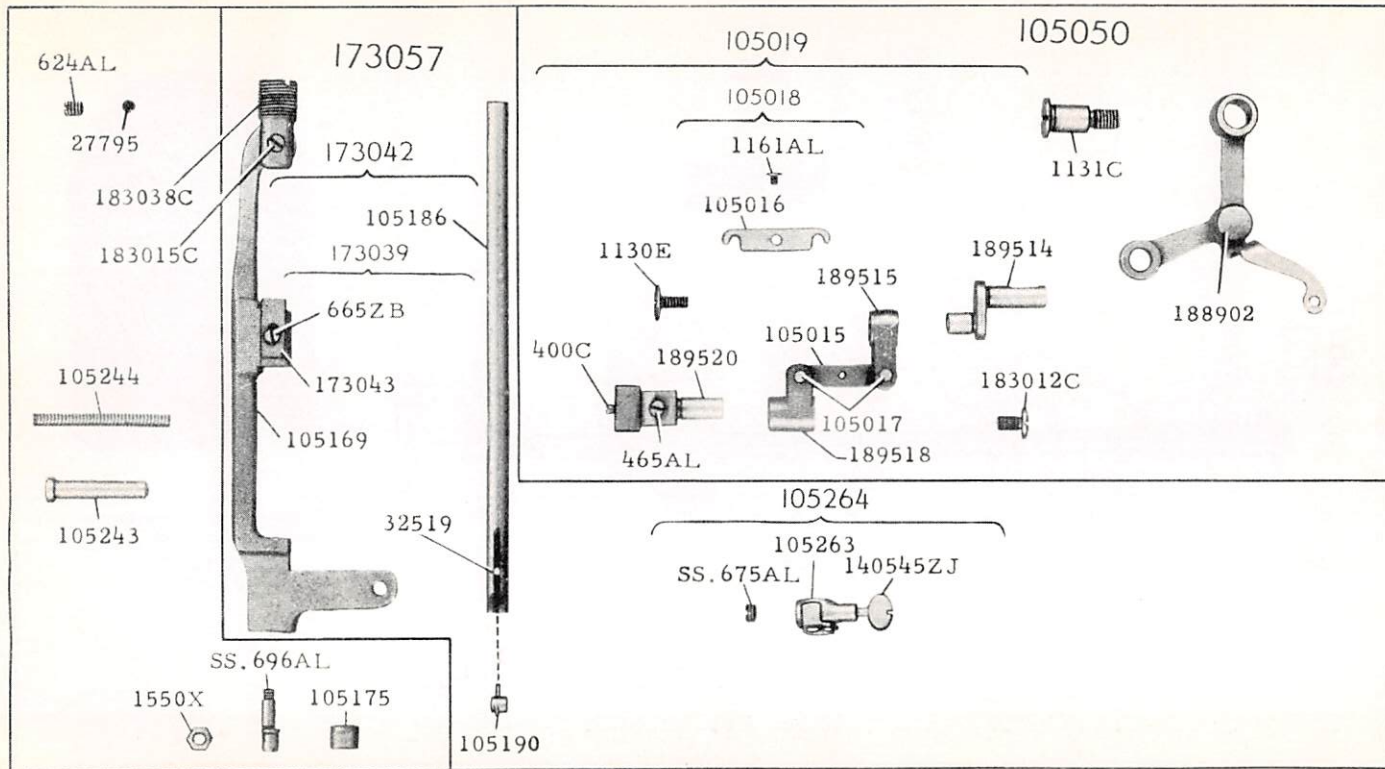


19027 - 1/2

19028 - 1/2

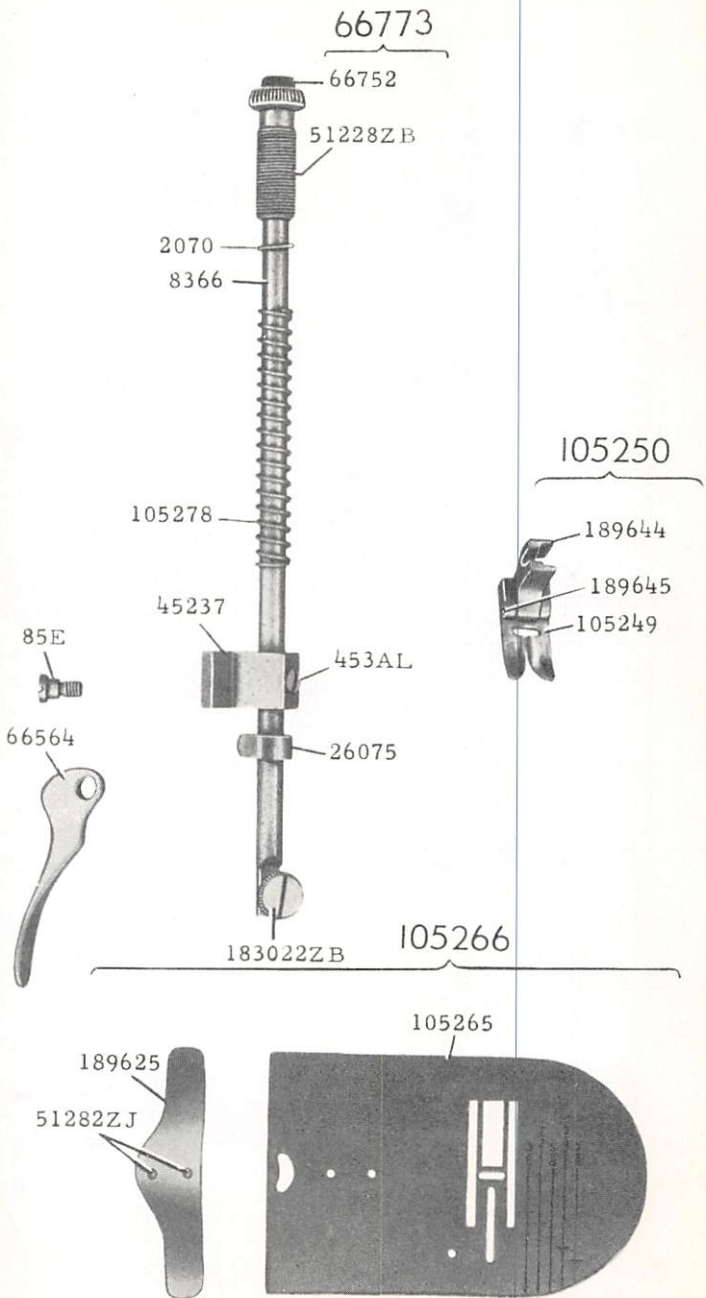





19029 - 5/8

 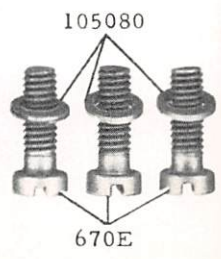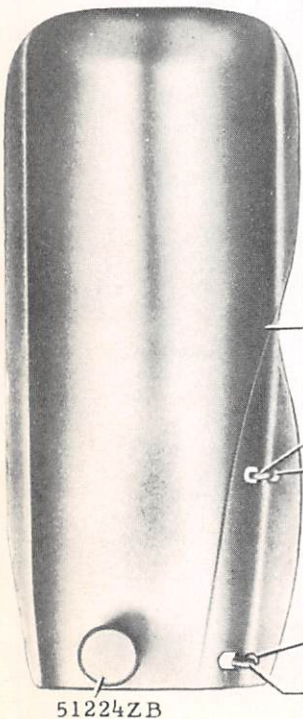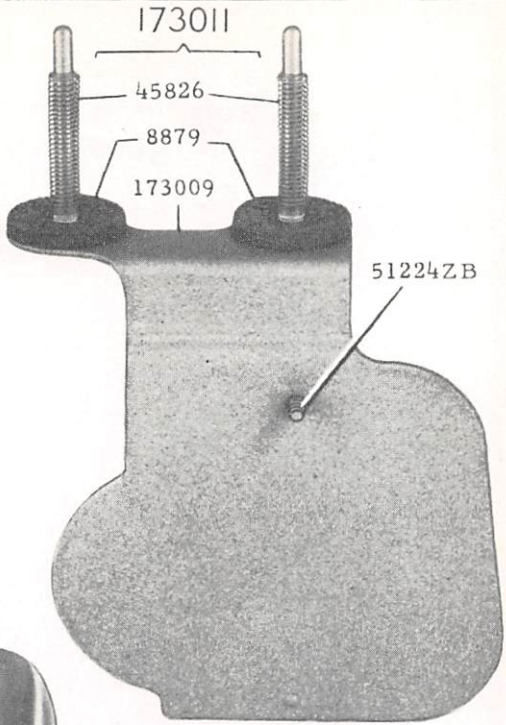





173046

SS.704AL 440AL

 173045

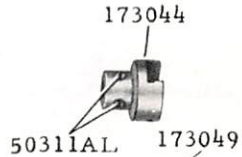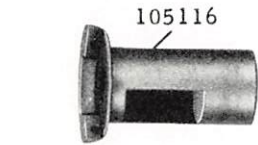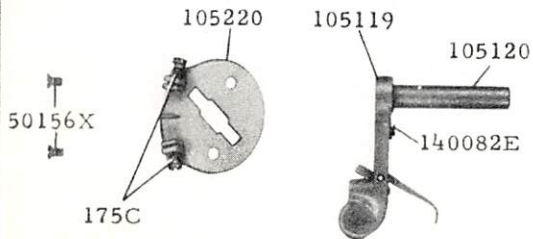


105172

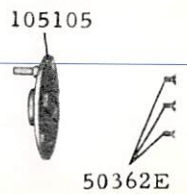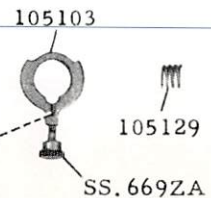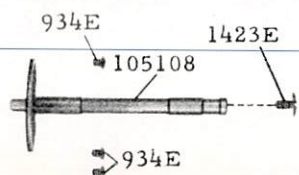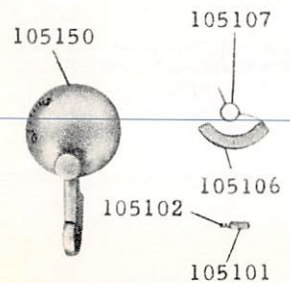


105129

19030 - 3/8

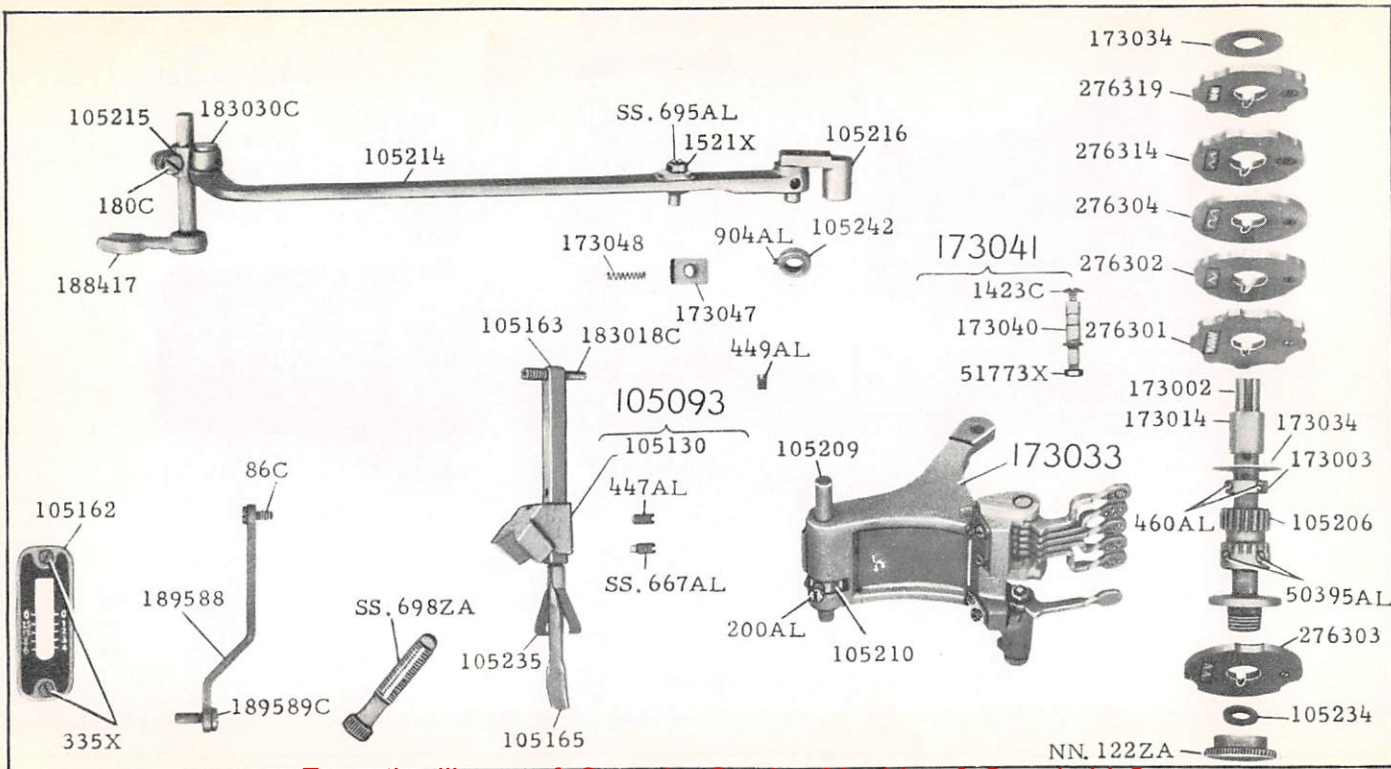


19031 - 3/8

From the library of: Superior Sewing Machine & Supply LLC

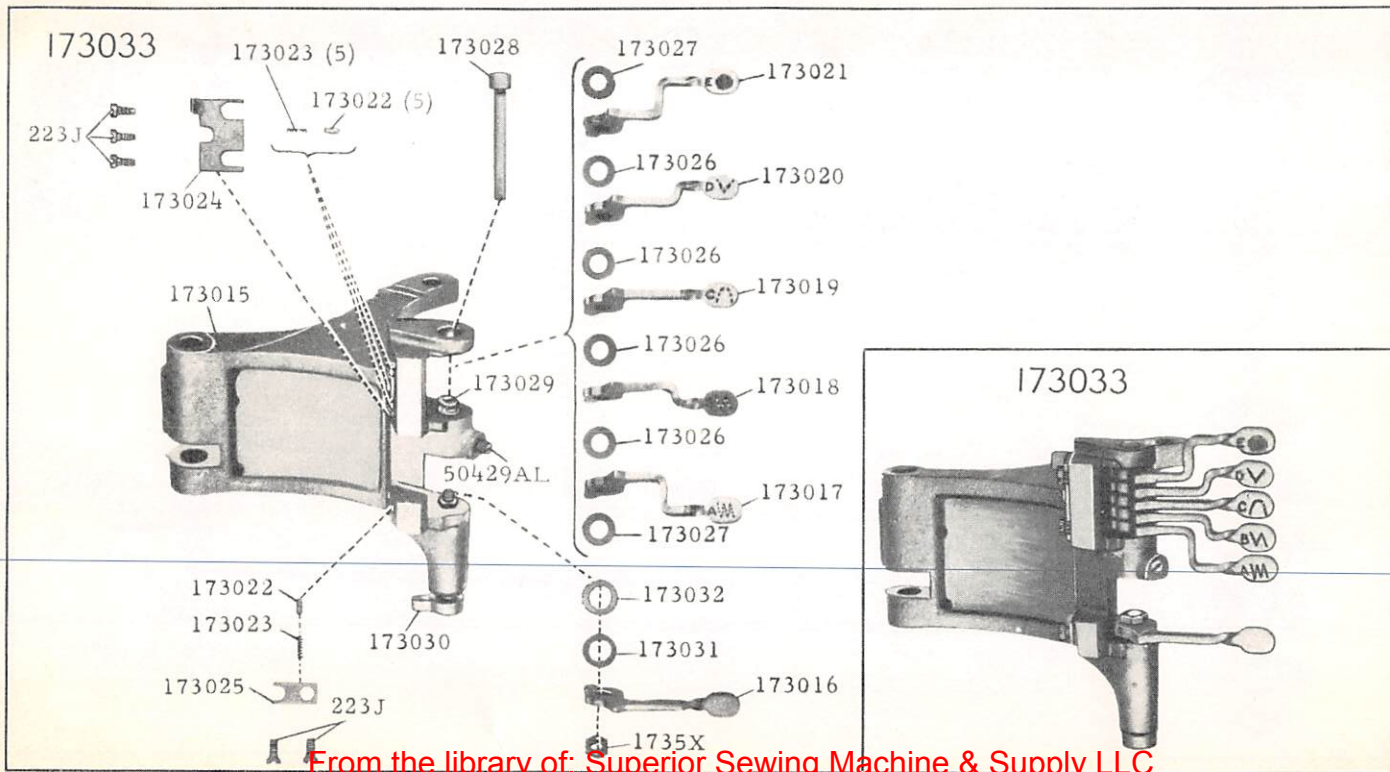


From the library of: Superior Sewing Machine & Supply LLC

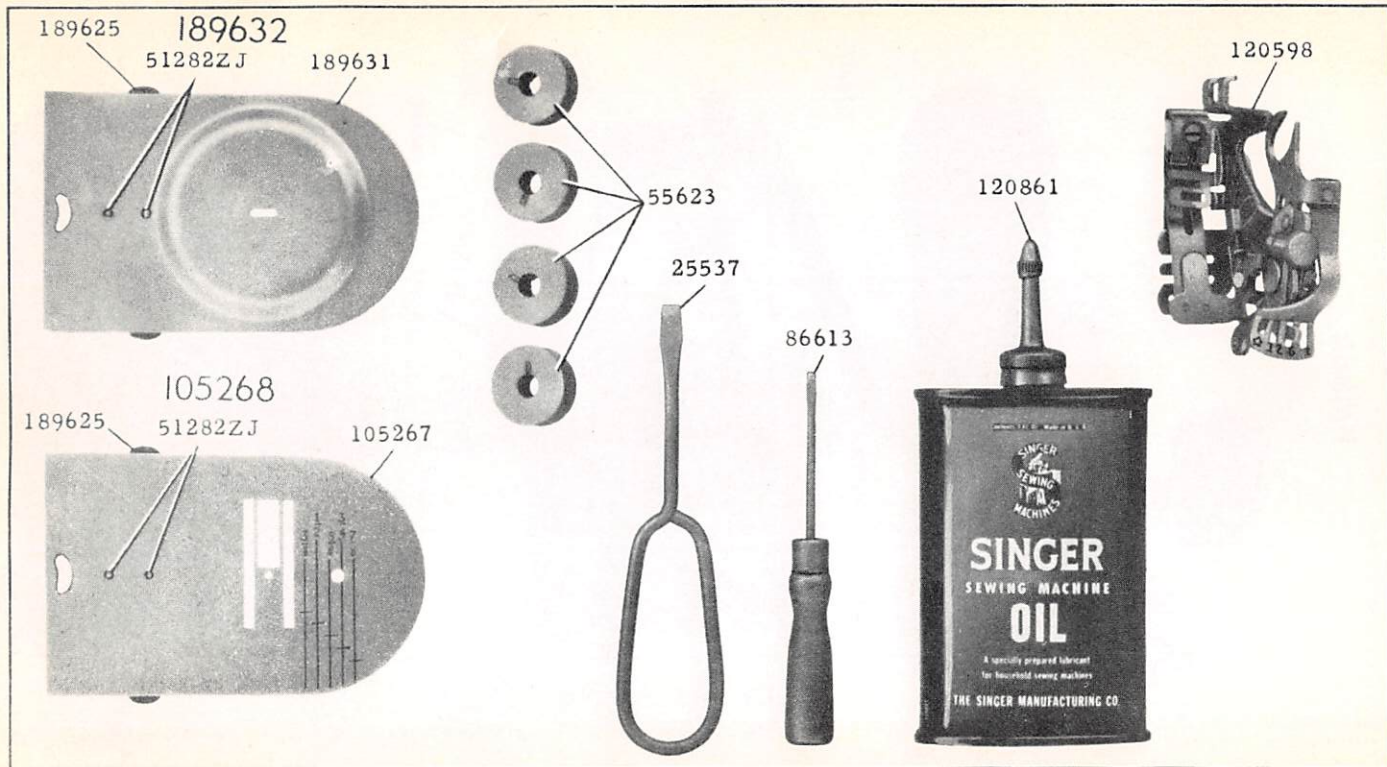


19033 - 1/2

From the library of: Superior Sewing Machine & Supply LLC

21378 - 1/2

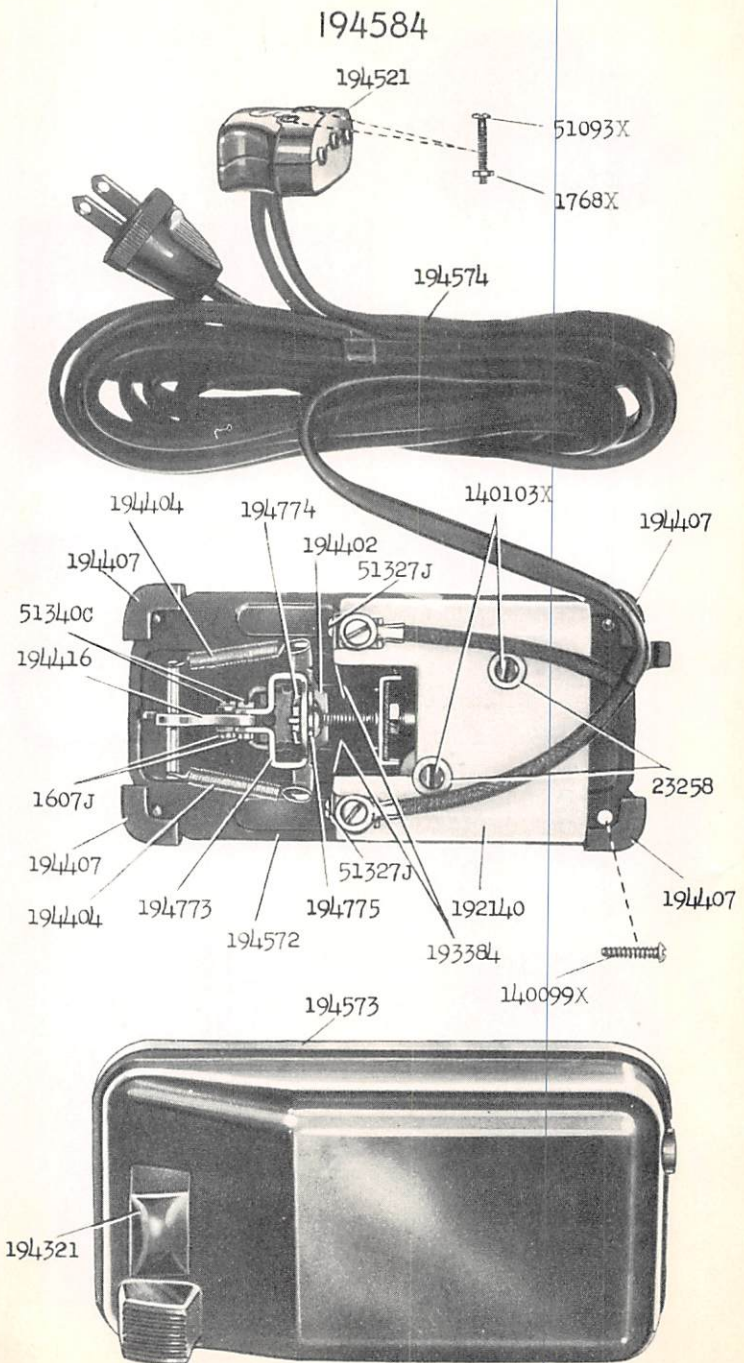

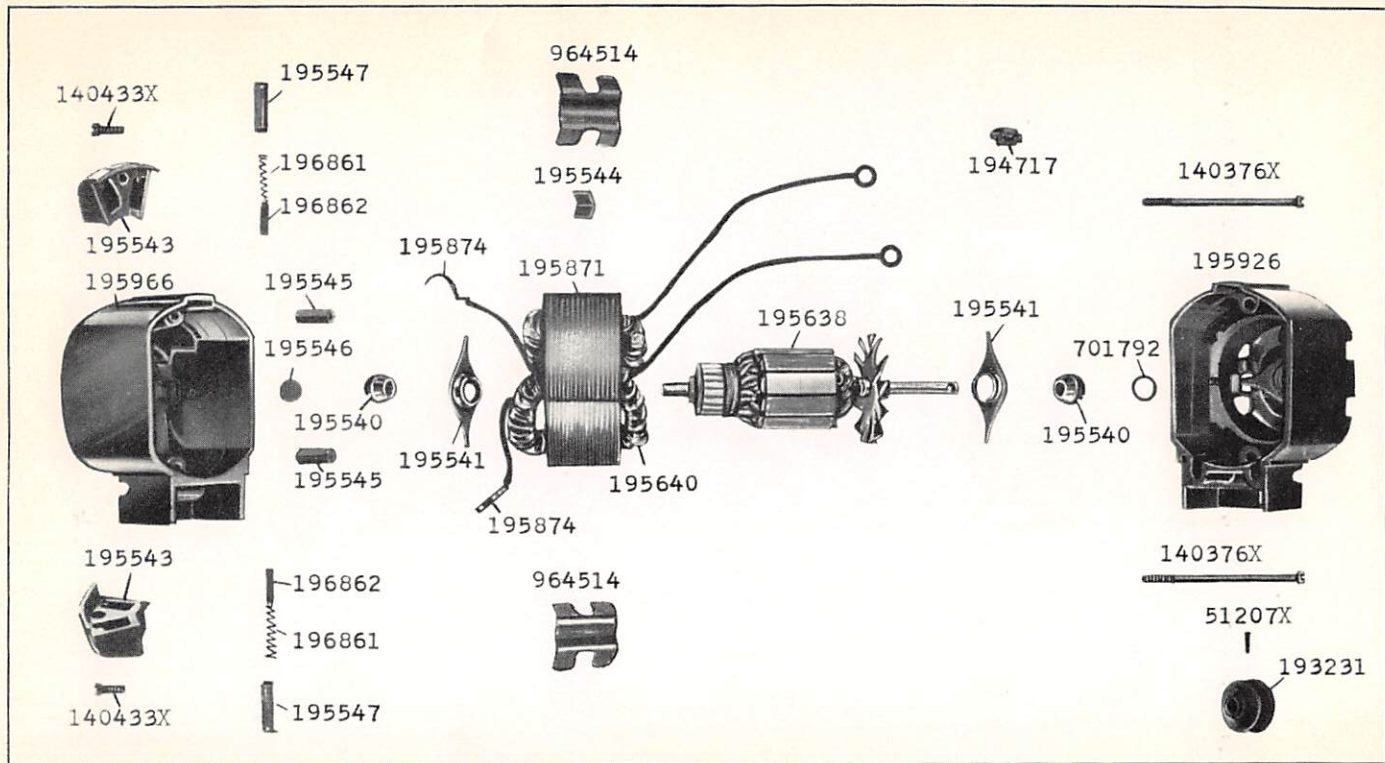

24623-1/3

